


JUMP KING® BACKYARD

MODEL: JKCF / JKBR / JK31

OWNER'S MANUAL

ASSEMBLY, INSTALLATION, CARE, MAINTENANCE AND USER INSTRUCTIONS

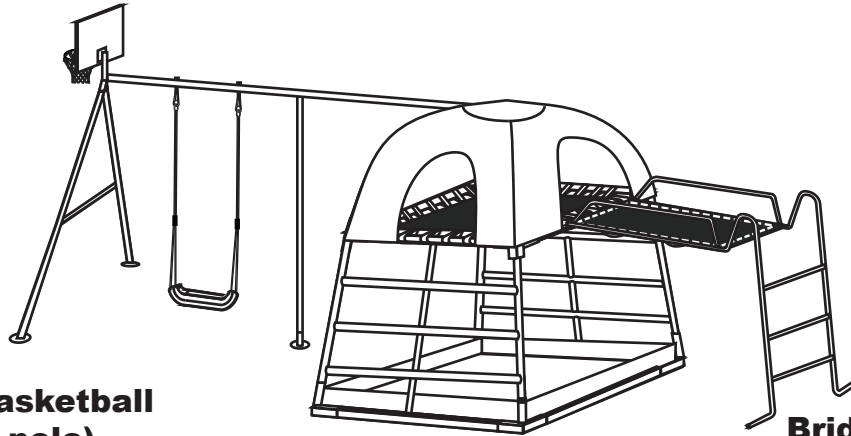

**3 in 1 (Swing, Basketball
hoop, Fireman's pole)**

MODEL: JK31

**Ultra Climbing Frame
MODEL: JKCF**

Bridge

MODEL: JKBR

WARNING

- This product is designed to be used by children ages 3+.
- Maximum weight is 110 lbs.(50kg) per user, maximum 2 users.
- Carefully read this entire instruction manual before you start to assemble or use this product.
- You must follow all instructions and warnings while using this equipment.
- Do not use this product on hard packed soil, concrete or any kind of hard surface.
- This equipment must be anchored. You should consult your local contractor regarding the best way to anchor the product at your location of installation.
- Assembly requires at least two adults.
- Save this instruction manual for future reference.
- This product contains small parts and is not suitable for children under 36 months until fully assembled.
- Only for residential use.
- Adult supervision is required.
- Keep away from fire.
- Children must not use the equipment until properly installed.
- Remove all packaging before giving to your children.



**View video instructions by
pointing your smartphone's
barcode scanner at this QR
code**

YJ USA Corp.,
3970 Lindbergh Drive
Addison, TX 75001

Please contact us at
www.jumpking.com
contact@jumpking.com

YJ Europe Ltd
Unit 3/3a Farthing Road Industrial Estate,
Ipswich, Suffolk, IP1 5AP

Please contact us at
www.jumpking.eu
customerservice@yjeurope.co.uk

TABLE OF CONTENTS

- IMPORTANT INSTRUCTIONS AND WARNINGS 3
- CARE AND MAINTENANCE CHECKLIST 5
- TOOLS NEEDED 6
- PART 1 - ASSEMBLE THE ULTRA CLIMBING FRAME 7**
 - PARTS LIST 8
- PART 2 - ASSEMBLE THE BRIDGE 22**
 - PARTS LIST 23
- PART 3 - ASSEMBLE THE 3 IN 1 28**
 - PARTS LIST 29
- ANCHORING 39

IMPORTANT INSTRUCTIONS AND WARNINGS



WARNING

READ ALL INSTRUCTIONS BEFORE ASSEMBLING OR USING THIS EQUIPMENT

AGE LIMIT

- Maximum user weight is 110 pounds (50kg) per user. Maximum 2 users.
- The equipment is designed for children over three (3) years of age. Use by younger children can result in injury.
- On-site adult supervision is required at all times for children of all ages.
- Do not allow use by children with any physical condition that may affect his/her ability to use this equipment safely.

BEFORE YOU BEGIN

- Carefully read all instructions in this manual before assembling and using this product.
- The unit must be assembled by adults. Heavy duty working gloves must be worn to avoid injuries during assembly.
- Children must not use the equipment until it is properly assembled and anchored.
- Adult supervision is required during the use of this equipment at all times.
- Unpack all parts. Take a complete inventory of all parts and hardware using the parts and hardware lists in the following pages. If any parts are missing, do not return to the store. Please call customer service toll-free number listed on the cover page for assistance. Store the product back in the original box and do not begin to install until all parts are obtained.

LOCATION OF EQUIPMENT

- The equipment must be placed more than 72 inches (1.8 meters) from any structures or obstructions, including but not limited to buildings, fence, garage, trees, laundry lines, electrical wires. Children can be seriously injured running or swinging into obstacles.
- The equipment must be installed on level ground. Uneven ground must be leveled prior to installation. Installation on sloping or uneven ground will put stress on the joints, causing the unit to become loose and unstable which may result in serious injuries.
- Remove any tripping hazards from the safe play area, such as roots, tree stumps, rocks, landscaping, sprinkler heads, railroad ties, plumbing and electrical connections.

Do not install your equipment over hard surface, e.g. asphalt, concrete, packed earth, tile or brick floor. A fall onto a hard surface can result in serious injury or death to the user. The following is a list of recommended ground covers from the Consumer Product Safety Commission:

| SUGGESTED MATERIAL | UNCOMPRESSED DEPTH |
|-----------------------------------|---------------------------|
| Double Shredded Bark Mulch | 9" (22.8 cm) |
| Uniform Wood Chips | 12" (30.48 cm) |
| Fine Gravel | 12" (30.48 cm) |
| Fine Sand | 12" (30.48 cm) |

The Consumer Product Safety Commission's Outdoor Home Playground Safety Handbook recommends to install and maintain the swing equipment over at least 9 inch of wood chips, mulch or shredded rubber (for equipment up to 96 inch high) or sand or pea gravel (for equipment no more than 60 inch high) as shock absorbing material. Dirt and grass, which are the most prevalent surfaces under home playground equipment, do not adequately protect children from serious head injuries. For swings, the surface should extend, in back and front, twice the height of the suspending bar. You should consult a local contractor about ways to secure the product in your location. Do not install your UFO swing over hard surface, e.g. asphalt, concrete, packed earth, tile or brick floor. Please refer to the CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK for detailed guidelines to prevent injuries from falls and other hazards on public and home playgrounds.

WARNINGS ON ANCHORING

The product must be anchored into the ground to prevent movement and to make the equipment more stable during use.

Some consumers want an anchoring system that allows the product to be moved to different locations. Other consumers want to keep their play set in a permanent location.

There are different types and different methods of anchoring this product. Jumpking does not make a specific anchoring recommendation as each consumer's need and conditions can vary.

It is highly recommended that you seek the opinion from a local licensed contractor on the best way to secure the swing in your location. Whatever method you prefer for your location, an anchoring system for this product should be used at all times.

All anchoring devices must be placed below the level of the playing surface to prevent tripping or injury resulting from a fall.

WEATHER CONDITIONS

- DO NOT use this equipment when it is wet. Use the equipment only when it's clean and dry. If the equipment is wet, the user could slip and suffer injuries.
- Please be aware of weather conditions when using the equipment. If it is too windy, users could lose control and suffer injuries. The equipment must be properly anchored, stored away or restricted from use during inclement weather such as heavy winds or severe weather storms. You should consult a local contractor about ways to anchor the product at your location.

PLAY SUPERVISION

- DO NOT allow more than one child to play on the swing at any one time.
 - DO NOT allow children to walk too close to moving parts. ALWAYS keep a safe distance to avoid being struck by other children while playing on swing.
 - DO NOT allow children to twist the swing chains or ropes, or loop them over the top support bar as this may reduce the strength of the chain or rope.
 - DO NOT swing empty seat as this may cause injuries.
 - ALWAYS guide children to sit in the center of swinging part, with their full weight placed in the seat center and holding on to the swing chains or ropes.
 - DO NOT allow children to jump off the equipment while it is in motion. ALWAYS come to a full stop before dismounting.
 - DO NOT allow children to climb on structural parts (e.g. legs, top bar). These are structural components and are not designed for play.
 - ALWAYS prevent access and secure from any unauthorized use when there is no adult supervision.
- DO NOT allow pets or other animals near the equipment to prevent damage or injuries.

INSPECTION PRIOR TO EACH USE OR DAILY INSPECTION

- DO NOT use the equipment if any bolts or nuts are missing or loose. ALWAYS check to ensure the equipment and all parts are well secured and stable before each use.
 - ALWAYS clear the play area of any rocks, sharp objects or any materials that could be potentially hazardous to users.
 - DO NOT attach items to the equipment that are not specifically designed for use with the equipment, including, but not limited to, jump ropes, clothesline, pet leashes, cables and chains as they may cause choking hazards.
 - The steel parts used in your product are subject to normal wear. Gradual deterioration of the material will occur, the speed of which will depend on the level of exposure to UV rays, airborne pollution, outdoor weather conditions such as rain and wind and the amount of use. You must inspect the equipment prior to every use. This includes, but is not limited to inspecting the swing for cracks, excess wear, missing parts, loose connections and for overall integrity. When the swing shows any signs of weakness, you must stop using the swing immediately, properly store the set or restrict access by users until the condition is resolved.
 - Verify that the suspended climbing ropes, chain or cable are secured at both ends and tightened, so that there is no loose ropes, chain or cable hanging that can result in choking hazard.
- The maximum fall height for the product was 82 in.

CARE & MAINTENANCE INSTRUCTIONS

- Inspect all nuts and bolts twice monthly during the usage season for tightness and tighten as required. It is particularly important that this procedure is followed at the beginning of each season.
- Oil all metallic moving parts monthly during the usage period.
- Check swing seats, ropes, cables and chains monthly during usage season for deterioration. Replacements should be made in accordance with the manufacturer's instructions.
- Check all coverings for bolts and sharp edges twice monthly during usage season to be certain that they are in place and replace when necessary. It is especially important to do this at the beginning of each new season.
- Do not use when the temperature drops below 32 degrees F (0 degrees C); remove and store the swing indoors.

At the beginning of each play season:

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Twice a month during play season:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Once a month during play season:

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

At the end of each play season or when the temperature drops below 32°F

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.


Disposal Instructions:

- The owner is to disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the playground equipment is discarded.

TOOLS NEEDED


Please gather the following tools prior to assembling this equipment.

TOOLS INCLUDED:

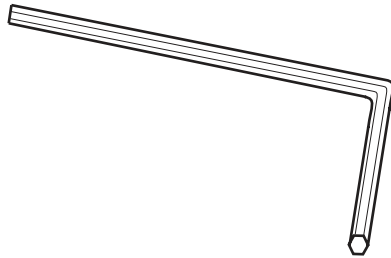


Description:
Allen Key (Included)


TOOLS NOT INCLUDED:

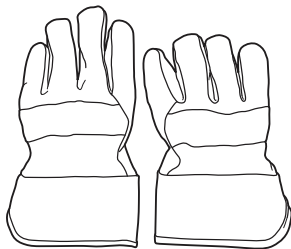


Description:
Gloves

 


Description:
Cross-head screwdriver

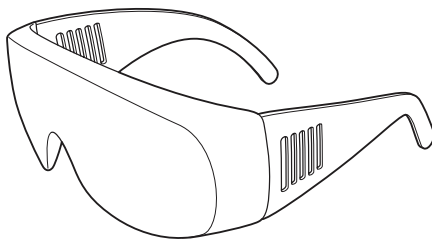

Description:
Safety glasses

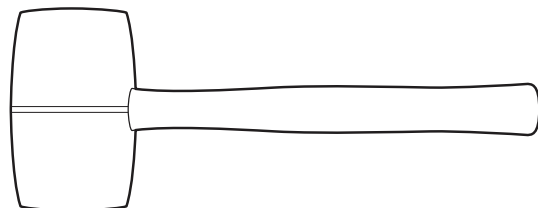


Description:
Mallet
(May be needed for installing anchor)

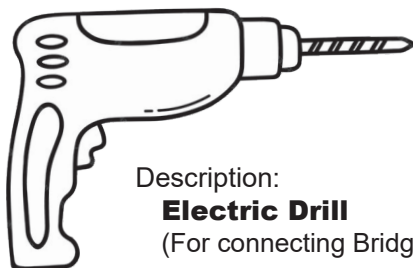
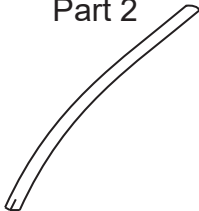





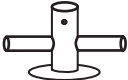


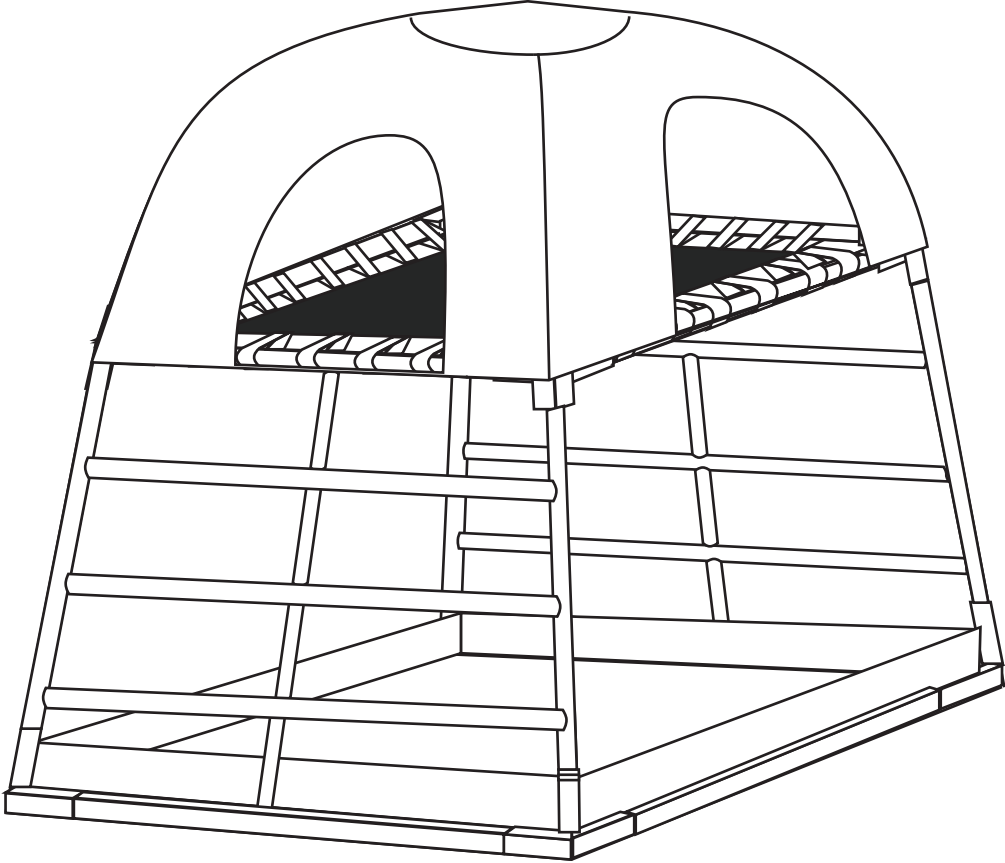











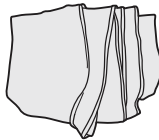
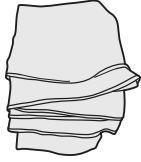
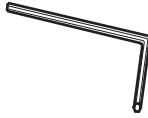
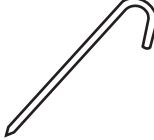

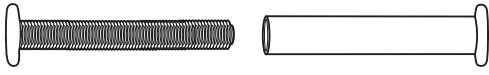
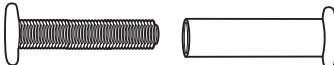

Description:
Electric Drill
(For connecting Bridge to the Climbing frame)

PART 1 - ASSEMBLE THE ULTRA CLIMBING FRAME

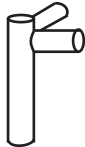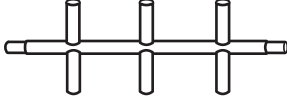

PARTS LIST
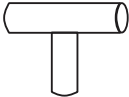
| | | | |
|--|--|---|---|
| <p>Part 1</p>  <p>Description: Top frame Quantity: 1 pc</p> | <p>Part 2</p>  <p>Description: Upper curve tube with marking A Quantity: 4 pcs</p> | <p>Part 3</p>  <p>Description: Bottom curve tube with marking B Quantity: 4 pcs</p> | <p>Part 4</p>  <p>Description: Bottom horizontal tube with marking C Quantity: 2 pcs</p> |
| <p>Part 5</p>  <p>Description: Bottom horizontal tube with marking D Quantity: 2 pcs</p> | <p>Part 6</p>  <p>Description: Bottom horizontal tube with marking E Quantity: 4 pcs</p> | <p>Part 7</p>  <p>Description: Bottom corner foot pad Quantity: 4 pcs</p> | <p>Part 8</p>  <p>Description: Bottom center foot pad with O marking Quantity: 2 pcs</p> |
| <p>Part 9</p>  <p>Description: Step horizontal tube with marking F Quantity: 12 pcs</p> | <p>Part 10</p>  <p>Description: Top horizontal tube with marking G Quantity: 4 pcs</p> | <p>Part 11</p>  <p>Description: Top horizontal tube with marking H Quantity: 1 pc</p> | <p>Part 12</p>  <p>Description: Step horizontal tube with marking I Quantity: 2 pcs</p> |
| <p>Part 13</p>  <p>Description: Step horizontal tube with marking J Quantity: 1 pc</p> | <p>Part 14</p>  <p>Description: Top corner "U" shape connector with marking K Quantity: 1 pc</p> | <p>Part 15</p>  <p>Description: Top corner connector with marking L Quantity: 3 pcs</p> | <p>Part 16</p>  <p>Description: Step center connector Quantity: 2 pcs</p> |
| <p>Part 17</p>  <p>Description: Step corner connector with marking M Quantity: 2 pcs</p> | <p>Part 18</p>  <p>Description: Step corner connector with marking N Quantity: 2 pcs</p> | <p>Part 19</p>  <p>Description: Top center T-connector Quantity: 2 pcs</p> | <p>Part 20</p>  <p>Description: Mat Quantity: 1 pc</p> |

| | | | | |
|---|---|---|--|---|
| <p>Part 21</p>  <p>Description: Tent cover Quantity: 1 pc</p> | <p>Part 22</p>  <p>Description: Ball Pit Quantity: 1 pc</p> | <p>Part 23</p>  <p>Description: 4mm Allen Key Quantity: 2 pcs</p> | <p>Part 24</p>  <p>Description: Metal pegs Quantity: 12 pcs</p> | <p>Part 25</p>  <p>Description: Expandable bolt Quantity: 6 pcs</p> |
| <p>Part 26</p>  | | <p>Description: Bolts and Nuts - 8mm x 30mm (A marking) Quantity: 48 pcs</p> | | |
| <p>Part 27</p>  | | <p>Description: Bolts and Nuts - 8mm x 20mm (B marking) Quantity: 4 pcs</p> | | |
| <p>Part 28</p>  | | <p>Description: Self tapping screw with C marking Quantity: 12 pcs</p> | | |

ASSEMBLY INSTRUCTIONS


- Place the equipment on level ground and not less than 72in (1.8m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- Do not install the equipment over concrete, asphalt, packed earth or any other hard surface; a fall onto a hard surface can result in serious injury or death to the equipment user.

TIGHTENING NUTS & BOLTS


- For ease of installation, do not over-tighten the nuts initially when you are starting to assemble the equipment. This will allow for adjustments during installation.
- After you have finished assembling the main components, go back and fully tighten all nuts. Check the entire unit and make sure all parts are properly assembled before allowing children to use the equipment.

ASSEMBLY AND INSTALLATION INSTRUCTIONS


Assembly Top Frame

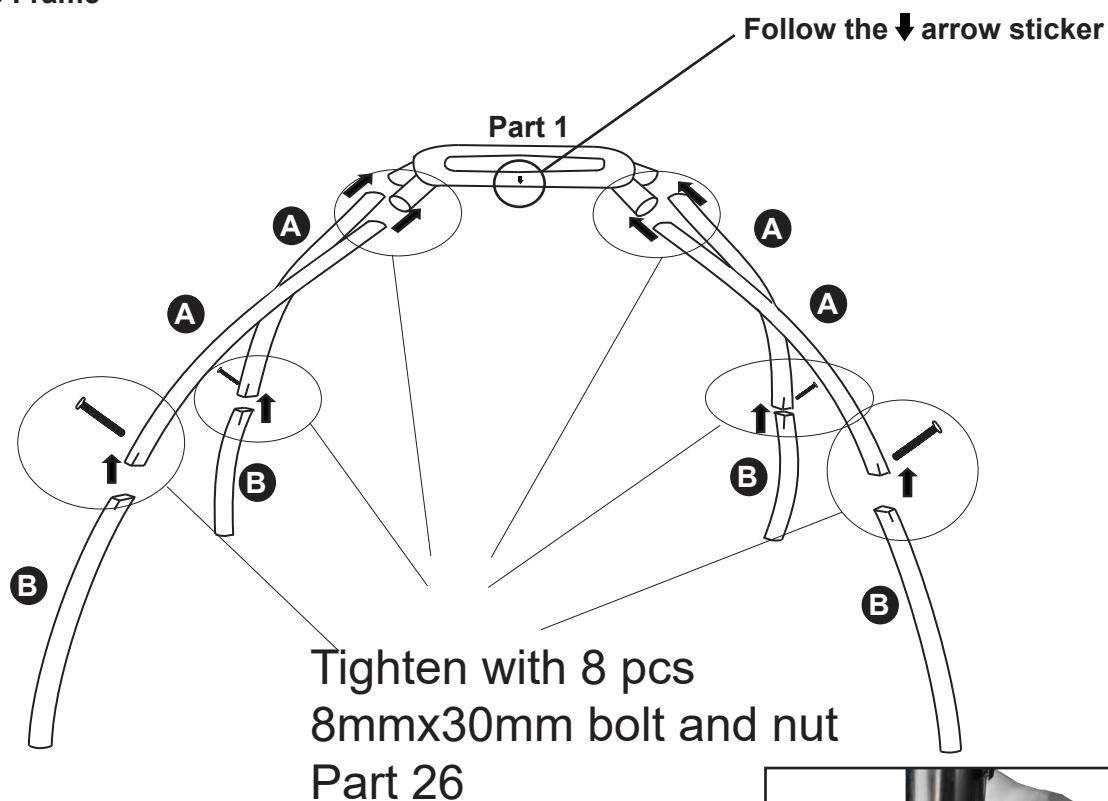


Using 2 allen keys to
tighten the bolt and nut.

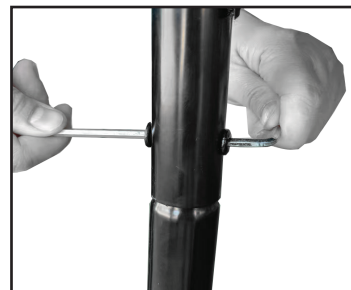


Assembly Bottom Frame



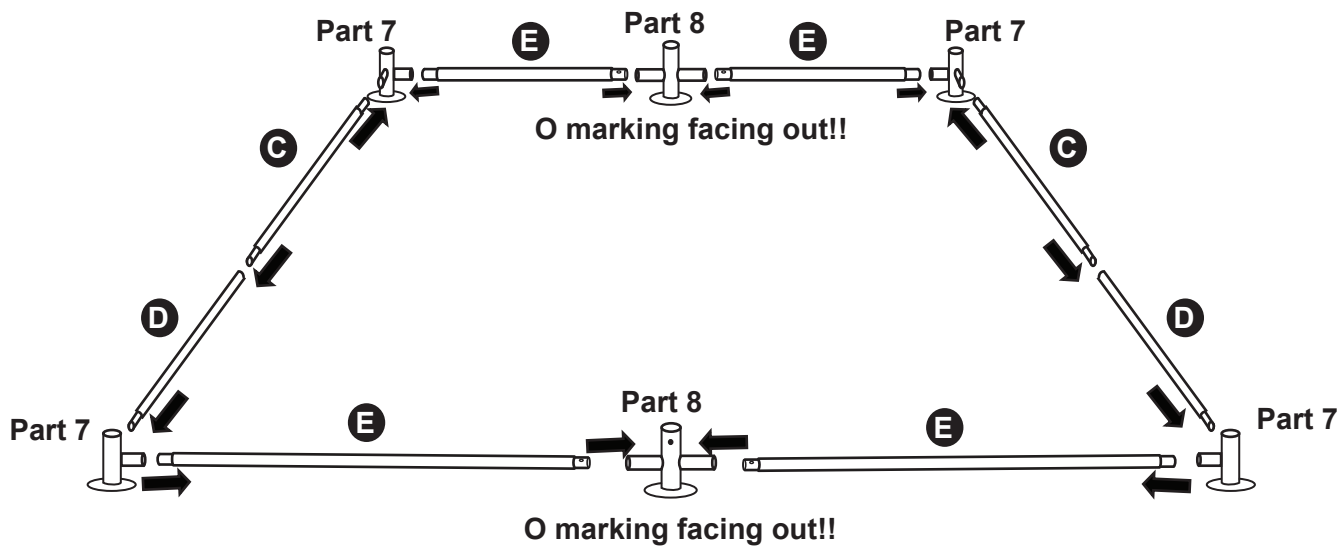




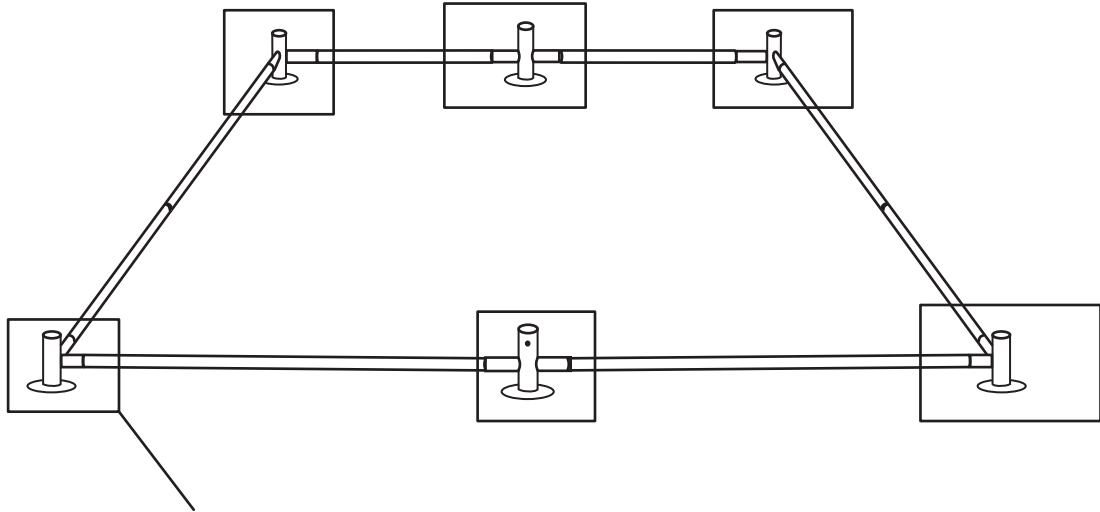


Tighten with 8mm x 30mm Bolt and Nut
Part 26


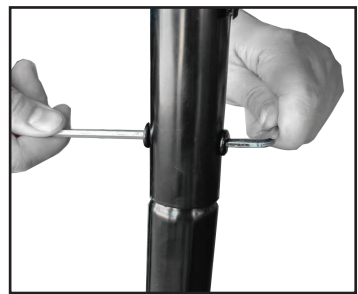


Using 2 allen keys to
tighten the bolt and nut.

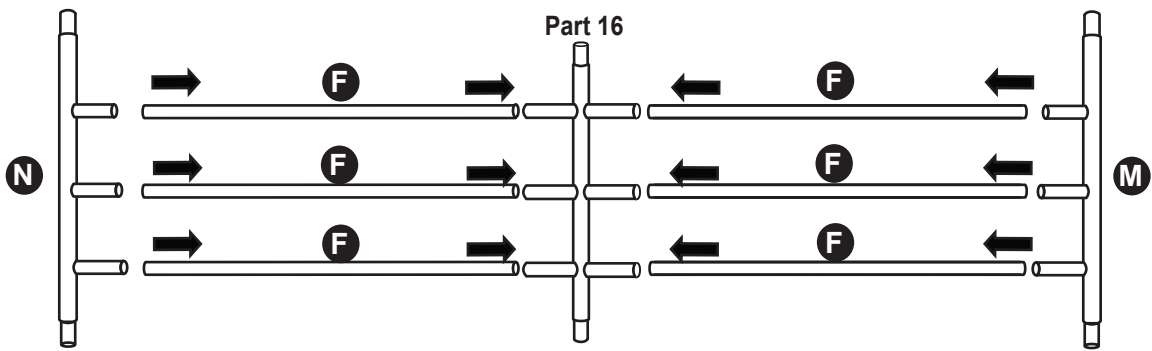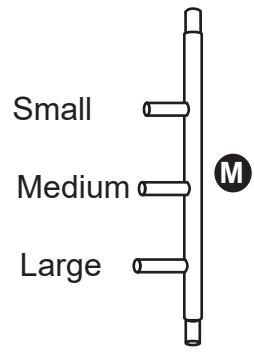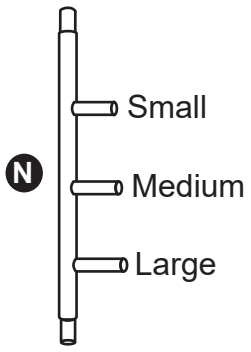

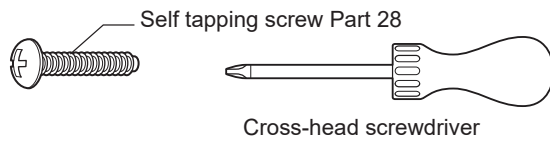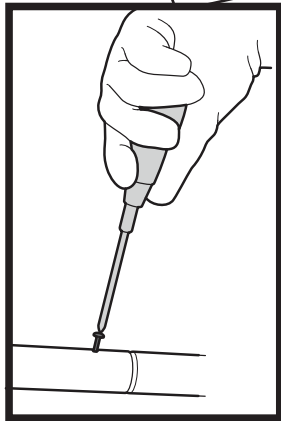
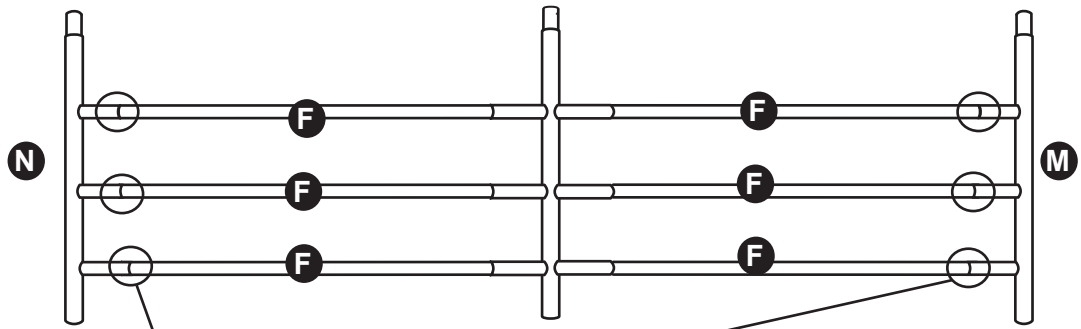


 You will also need a cross-head screwdriver (*not supplied*).


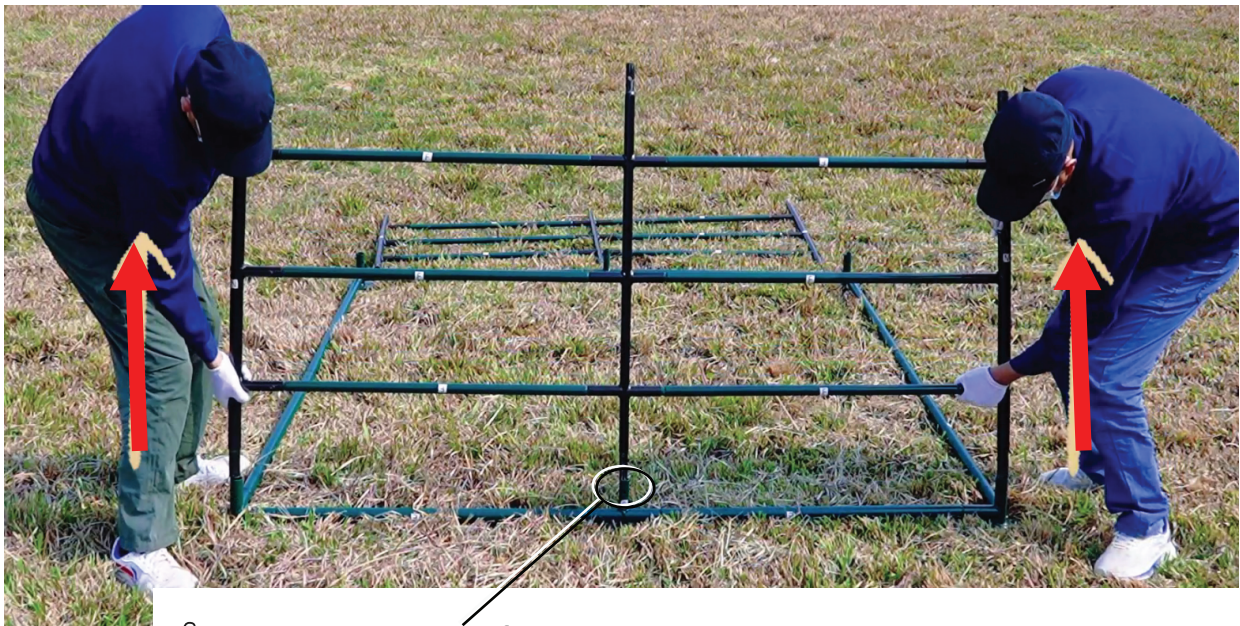




Bolts and Nuts - 8mm x 20mm (B marking) Part 27


Same step as back side

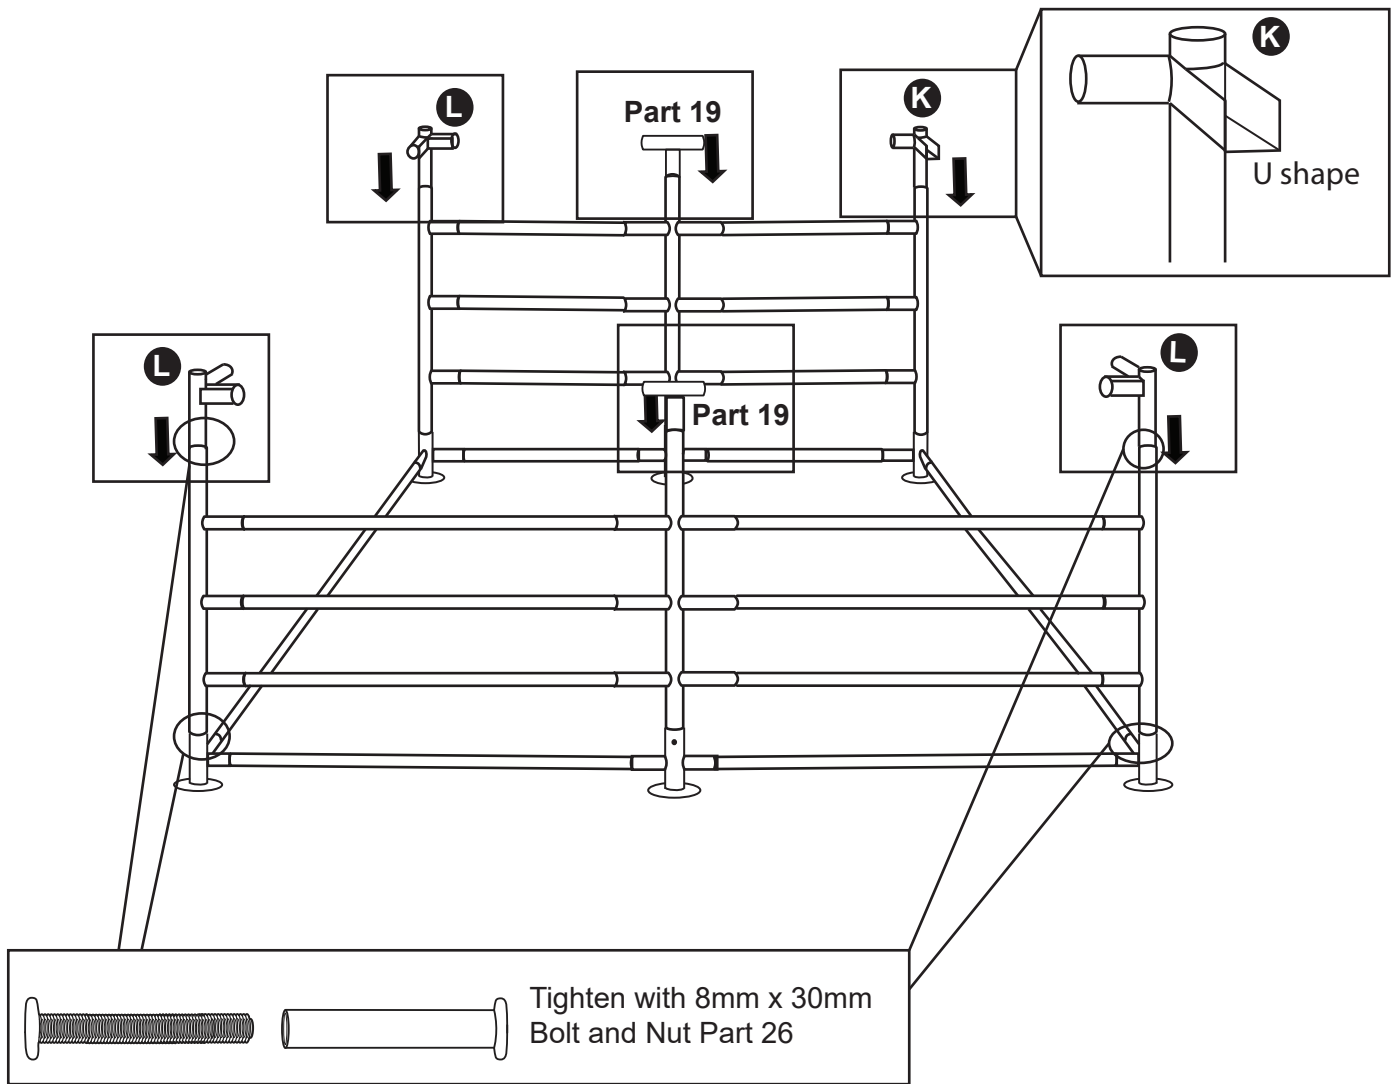
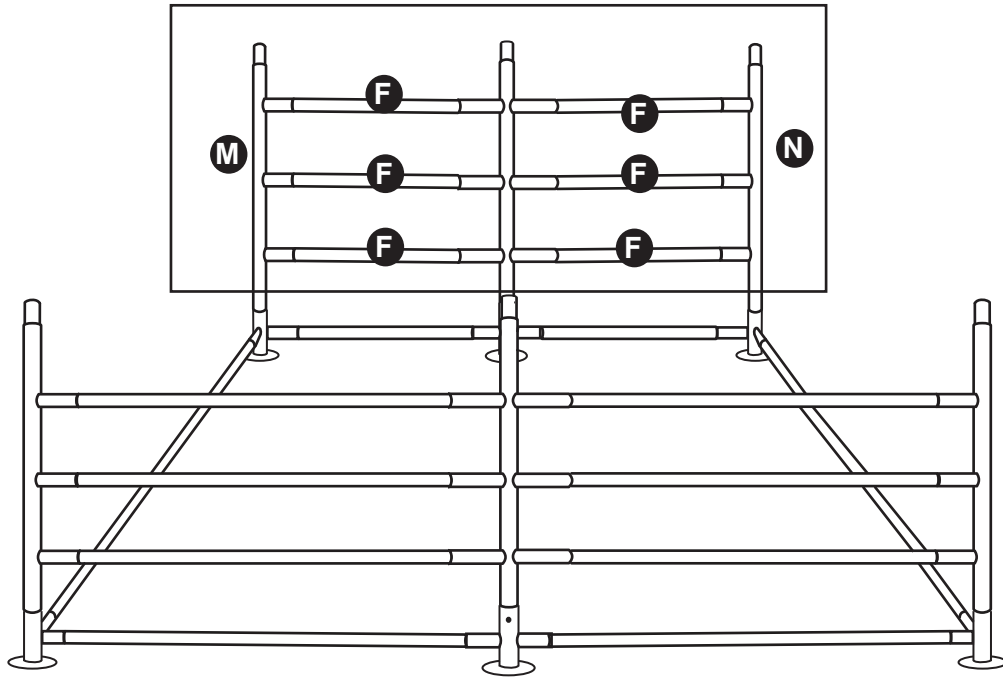


Assembly Platform Mat

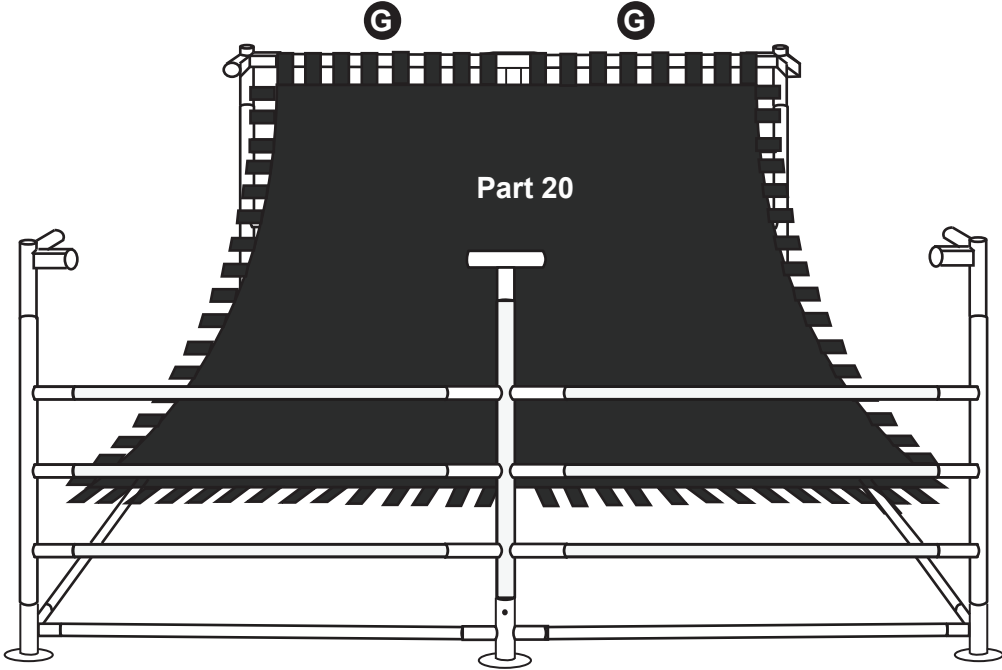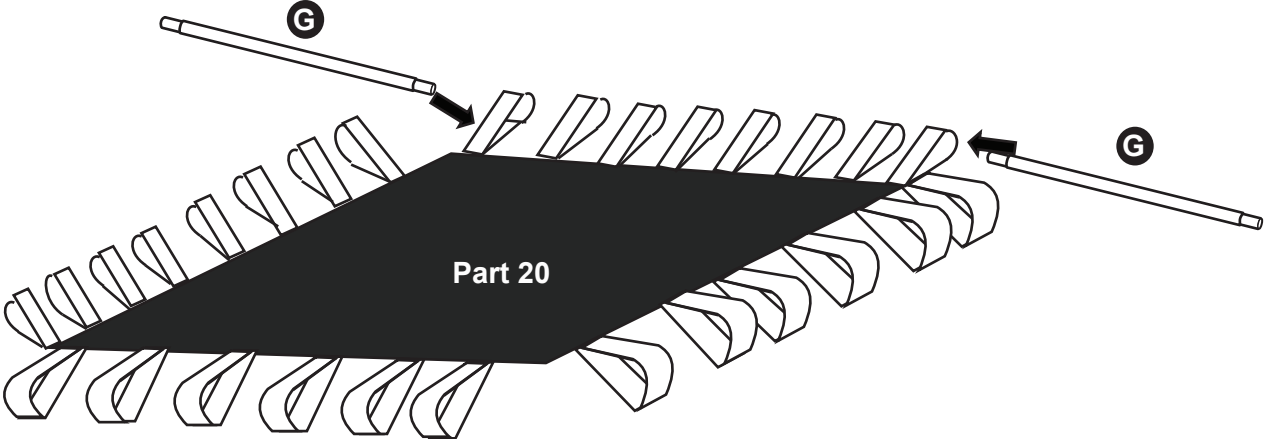

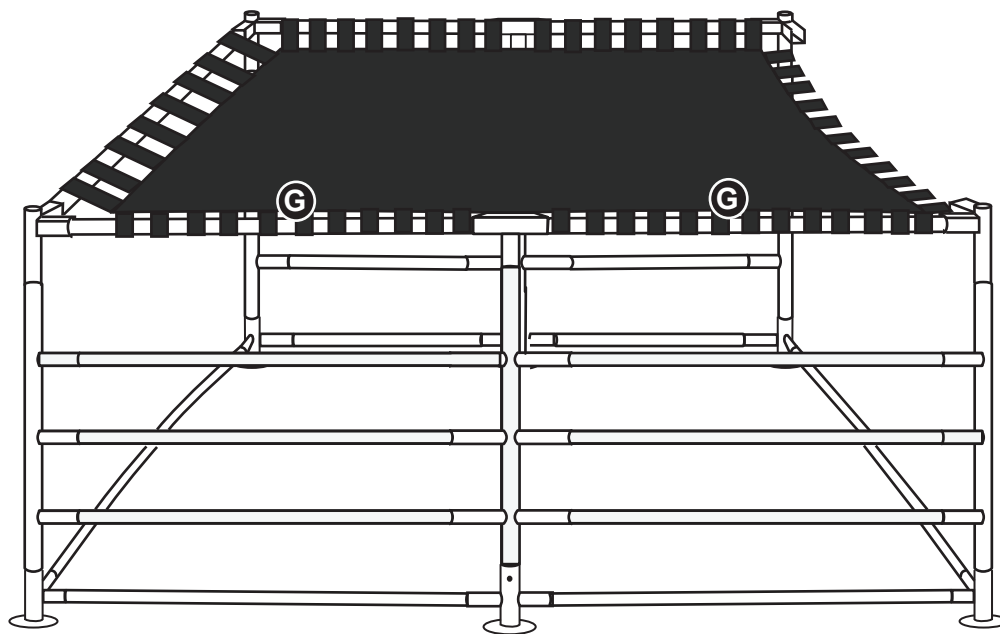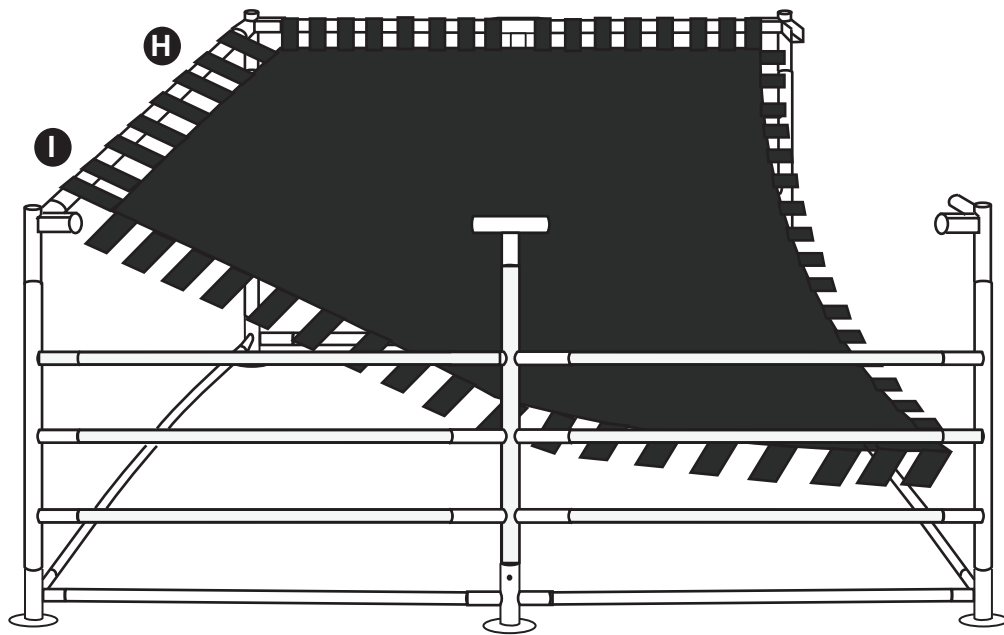

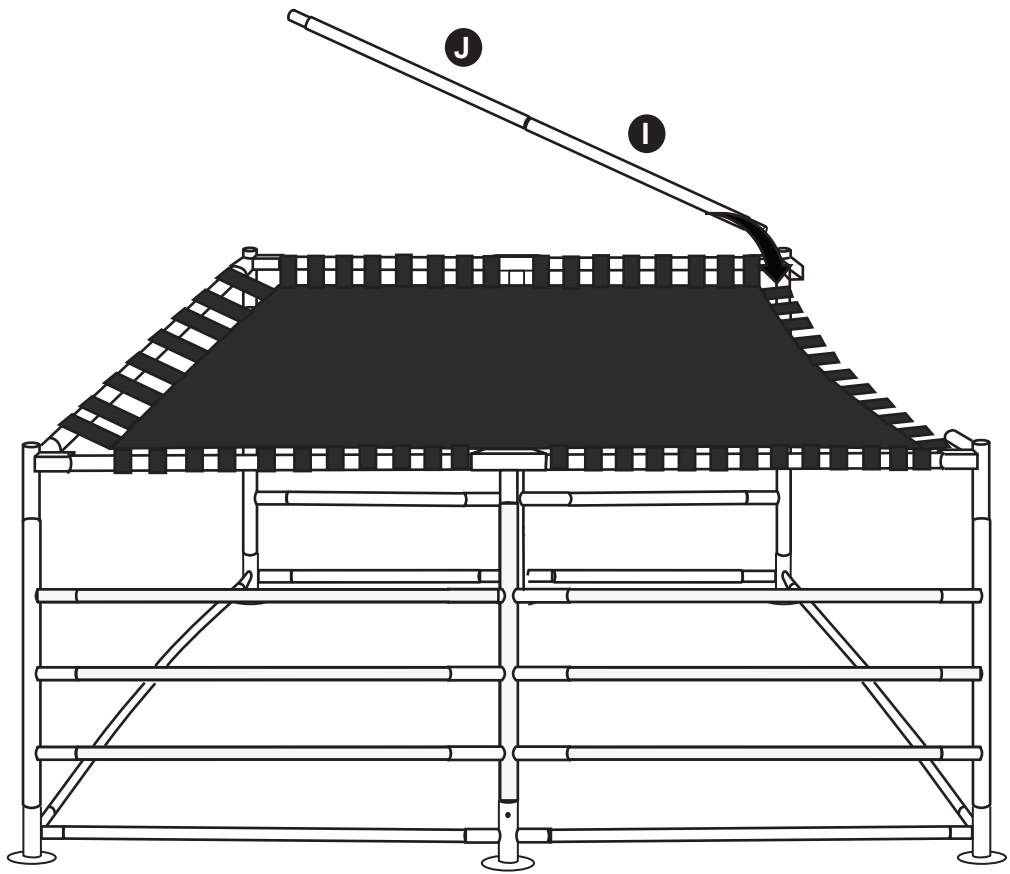


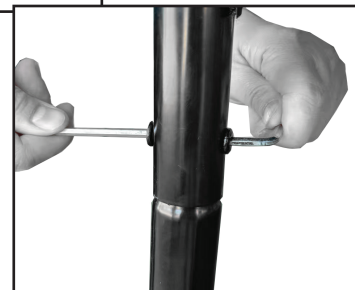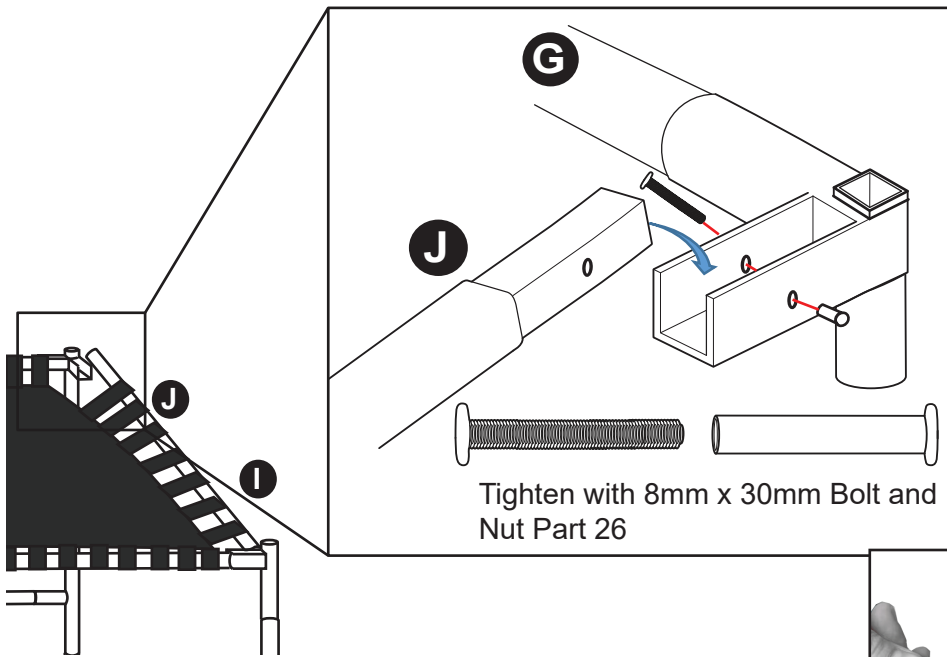


Using 2 allen keys to tighten the bolt and nut.

Bottom frame and Platform Mat completed

Tighten the remaining screw holes fix with 8mm x 30mm Bolt and Nut Part 26

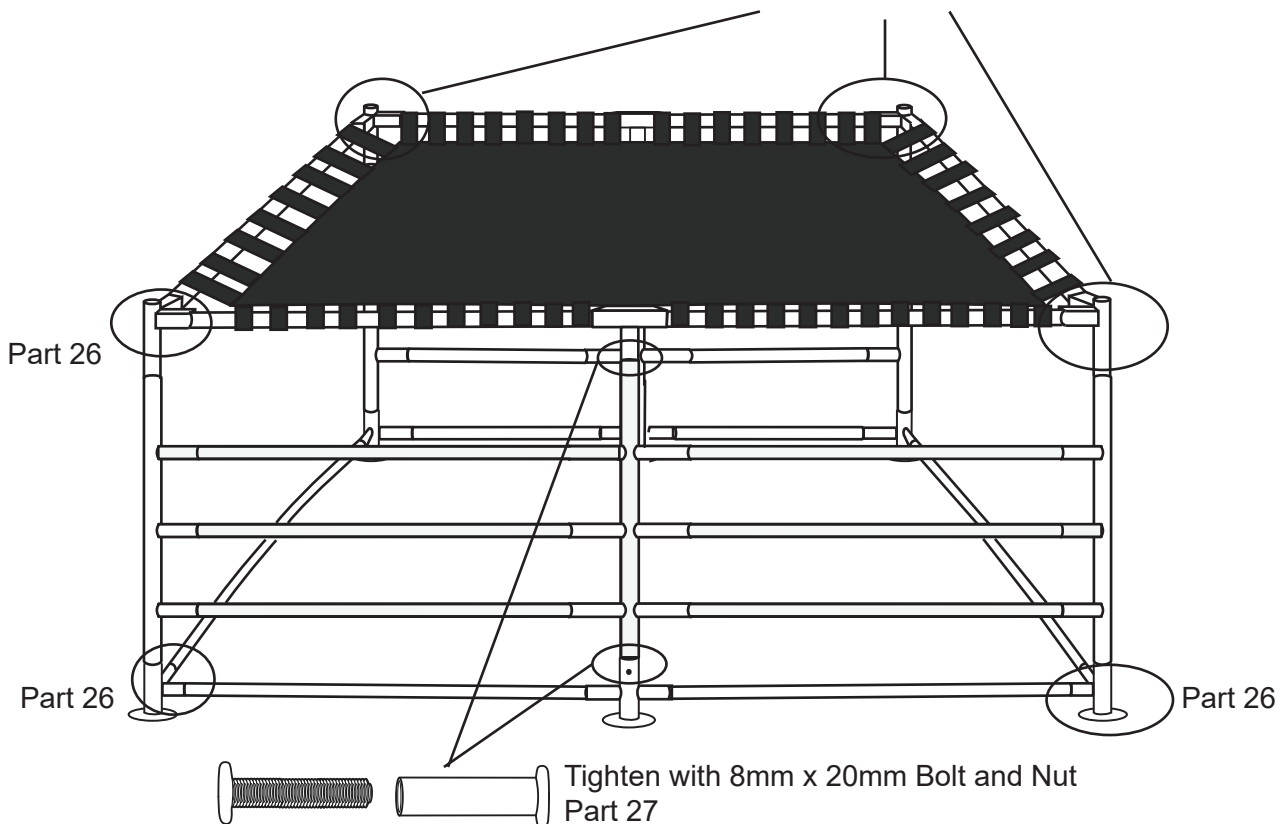


Cover the Tent cover Part 21 onto Top frame.

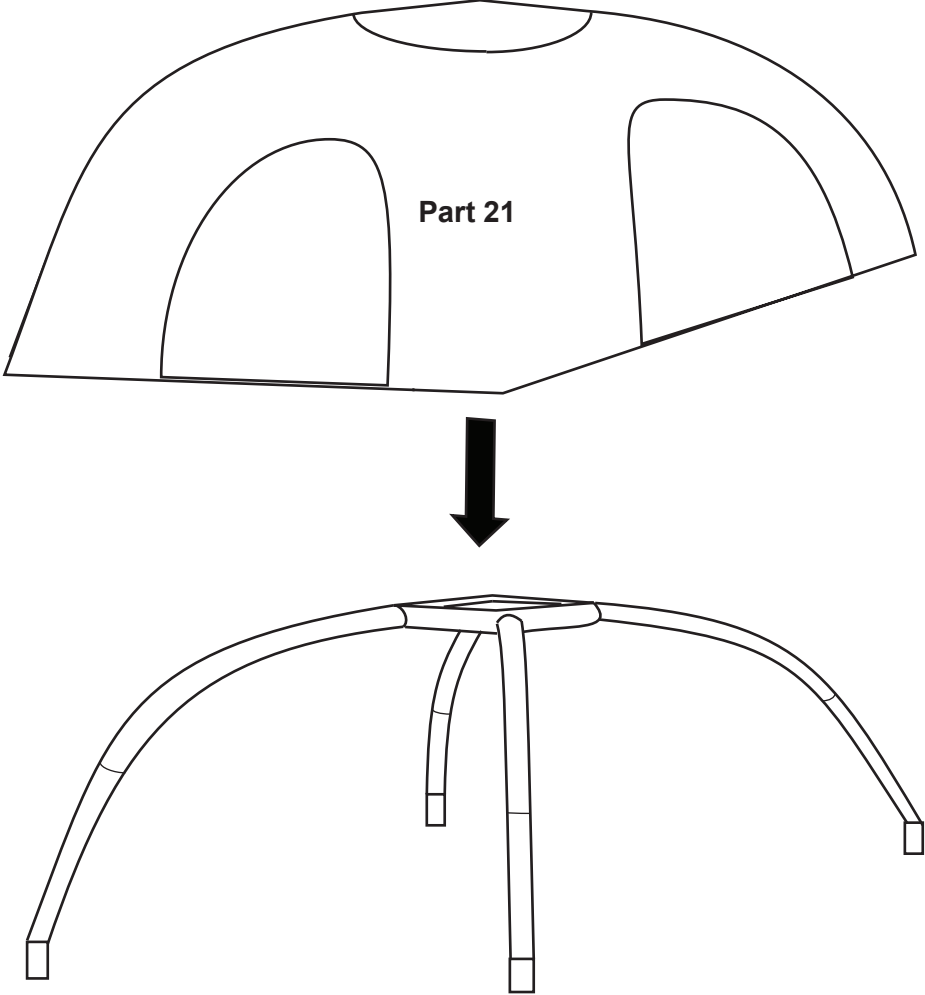

Assemble the Top frame to the Platform


This step requires 2 person to connect the top frame to the platform.

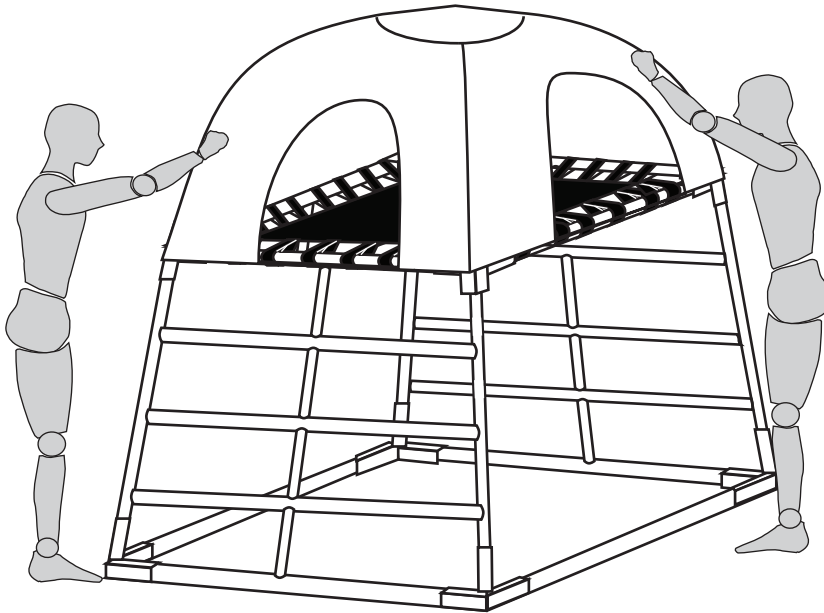

Use velcro straps to attach the Tent cover to the platform.




Assemble the Ball Pit Part 22

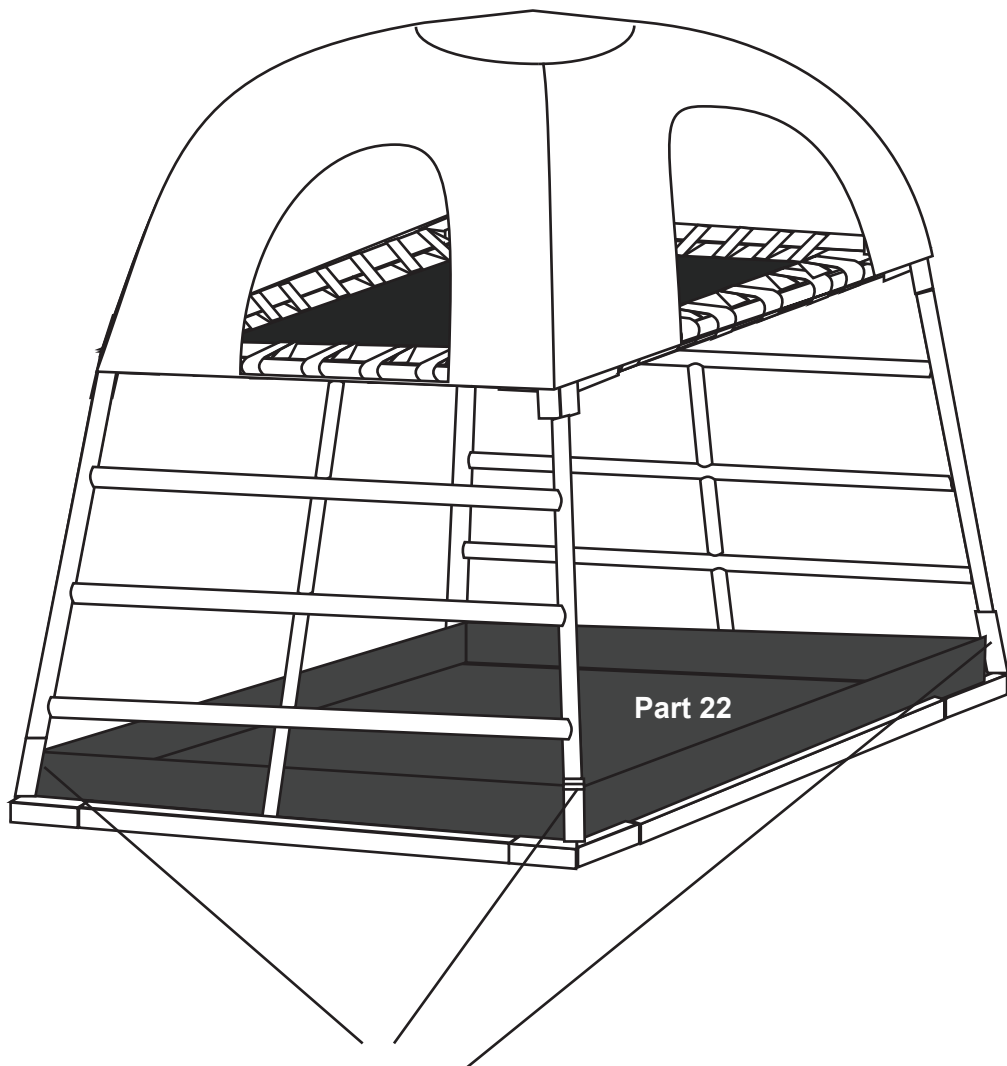



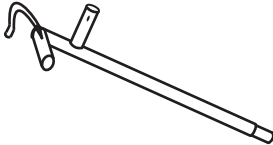

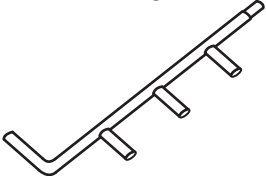



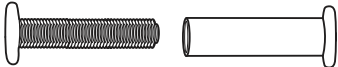


Use velcro straps to attach the Ball Pit on 4 corners of the bottom base.

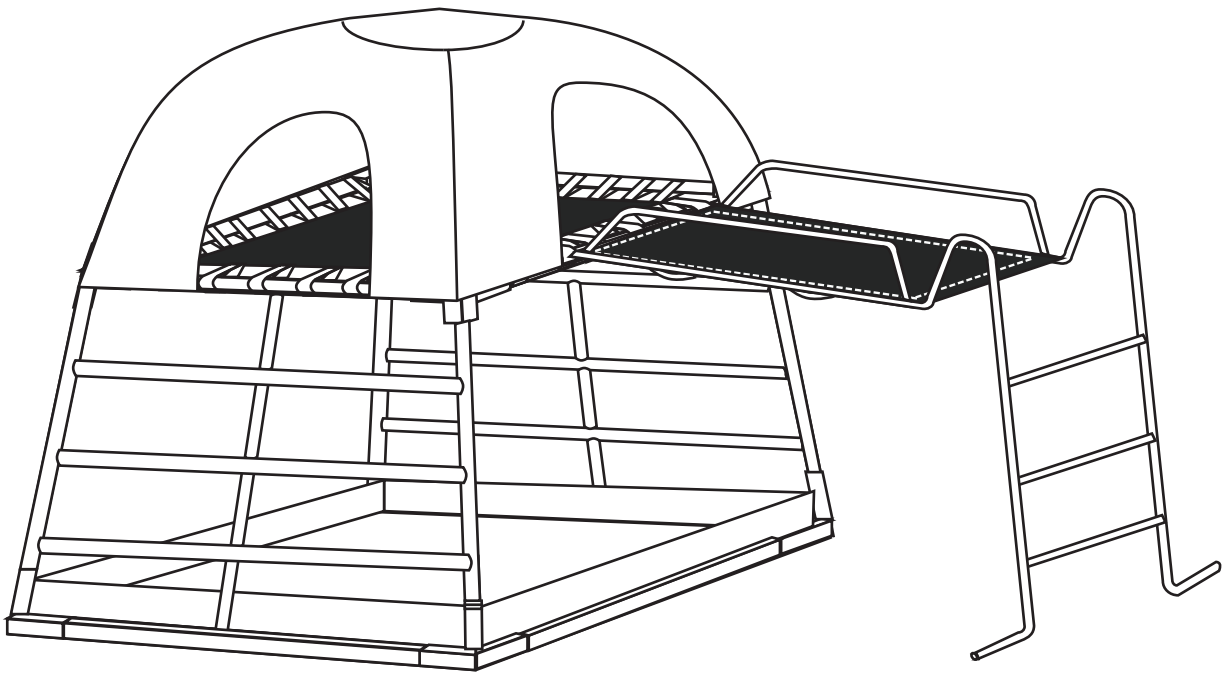You have completed Ultra Climbing Frame.

PART 2 - ASSEMBLE THE BRIDGE

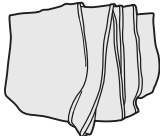

PARTS LIST

| | | | |
|--|---|---|--|
| <p>Part 1</p>  <p>Description: Bridge mat Quantity: 1 pc</p> | <p>Part 2</p>  <p>Description: Bridge side tube (Left) Quantity: 1 pc</p> | <p>Part 3</p>  <p>Description: Bridge side tube (Right) Quantity: 1 pc</p> | <p>Part 4</p>  <p>Description: Horizontal tubing Quantity: 5 pcs</p> |
| <p>Part 5</p>  <p>Description: Ladder vertical tube Quantity: 2 pcs</p> | <p>Part 6</p>  <p>Description: Bridge handle Quantity: 2 pcs</p> | <p>Part 7</p>  <p>Description: Top ladder frame (Left) Quantity: 1 pc</p> | <p>Part 8</p>  <p>Description: Top ladder frame (Right) Quantity: 1 pc</p> |
| <p>Part 9</p>  <p>Description: Bolts and Nuts - 8mm x 20mm (A marking) Quantity: 18 pcs</p> | | | |
| <p>Part 10</p>  <p>Description: Self tapping screw (B marking) Quantity: 2 pcs</p> | | <p>Part 11</p>  <p>Description: 4mm Allen Key Quantity: 2 pcs</p> | |

ASSEMBLY INSTRUCTIONS


- Place the equipment on level ground and not less than 72in (1.8m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- Do not install the equipment over concrete, asphalt, packed earth or any other hard surface; a fall onto a hard surface can result in serious injury or death to the equipment user.

TIGHTENING NUTS & BOLTS


- For ease of installation, do not over-tighten the nuts initially when you are starting to assemble the equipment. This will allow for adjustments during installation.
 - After you have finished assembling the main components, go back and fully tighten all nuts.
- Check the entire unit and make sure all parts are properly assembled before allowing children to use the equipment.

Assembly The Bridge


1.

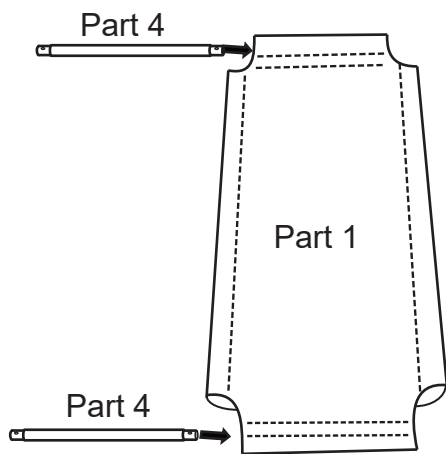


2.

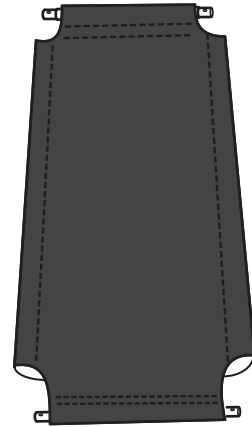


3.

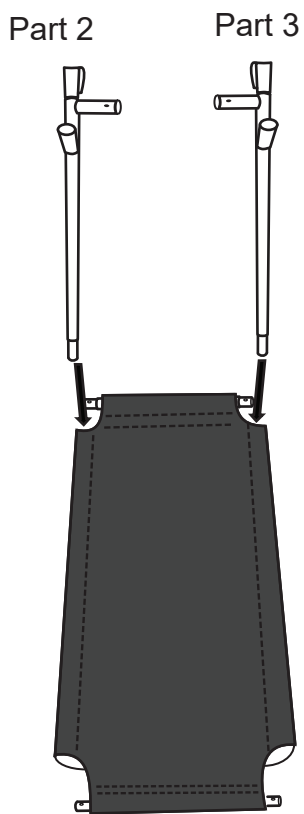


4. Tighten with 8mm x 20mm Bolts and Nuts
Part 9

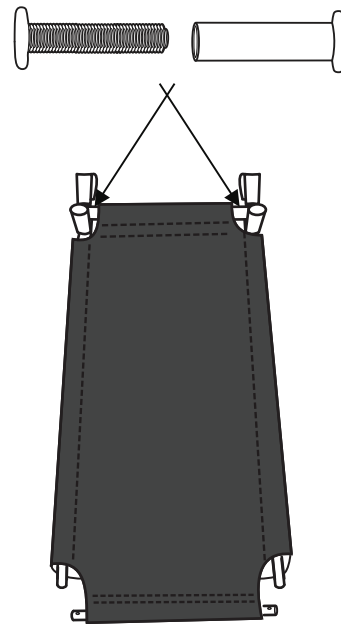

Using 2 allen keys to
tighten the bolt and nut.

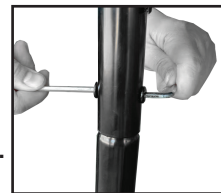


5.

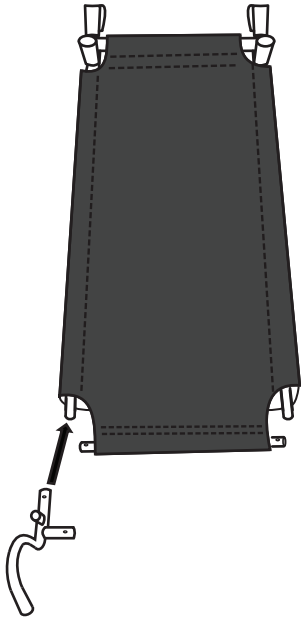


Part 7


6.

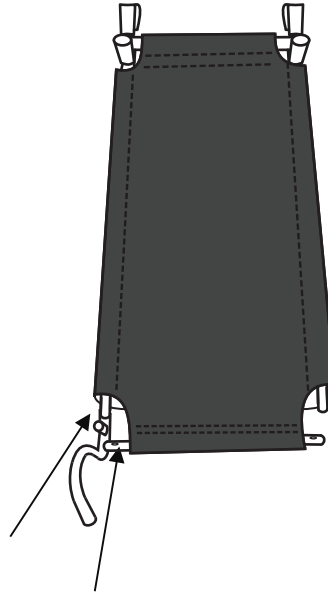

 
Tighten with 8mm x 20mm Bolts and Nuts
Part 9



Using 2 allen keys to
tighten the bolt and nut.

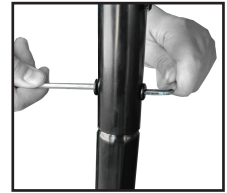


7.

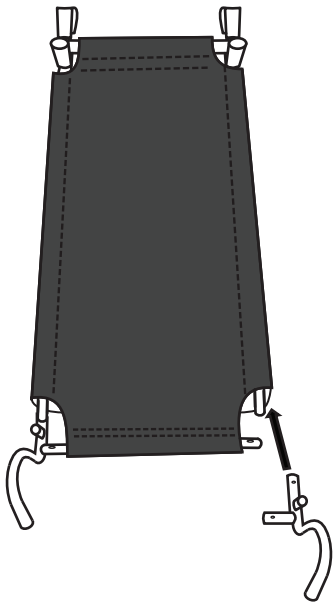


Part 8


8.

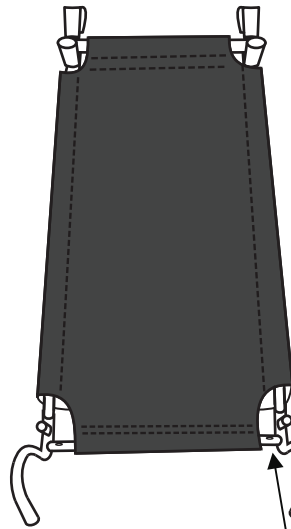

 
Tighten with 8mm x 20mm Bolts and Nuts
Part 9




Using 2 allen keys to
tighten the bolt and nut.

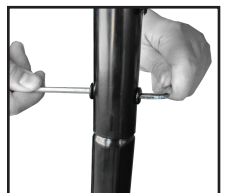


9.

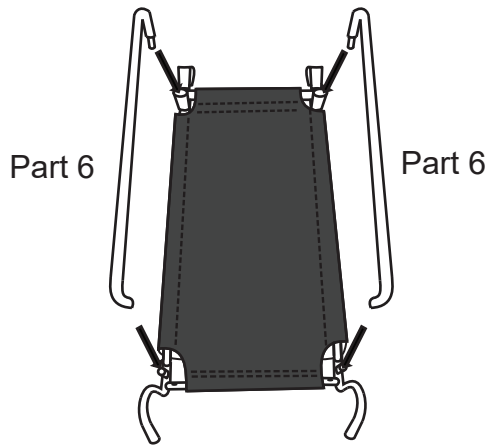


10.

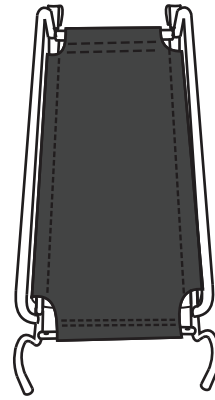


11.

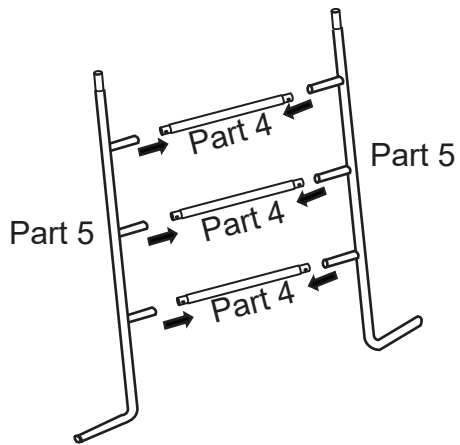


12.

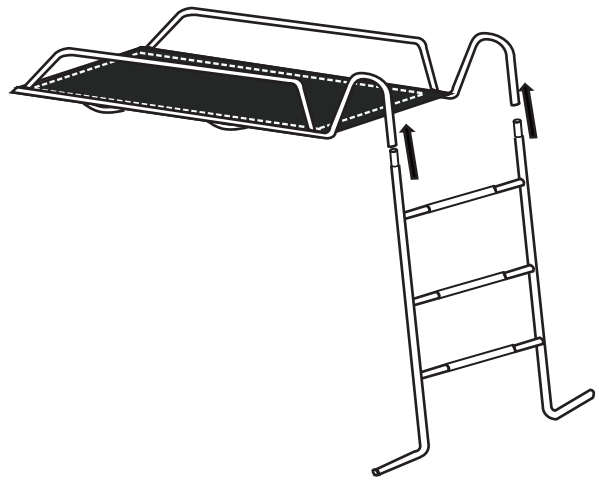



13.

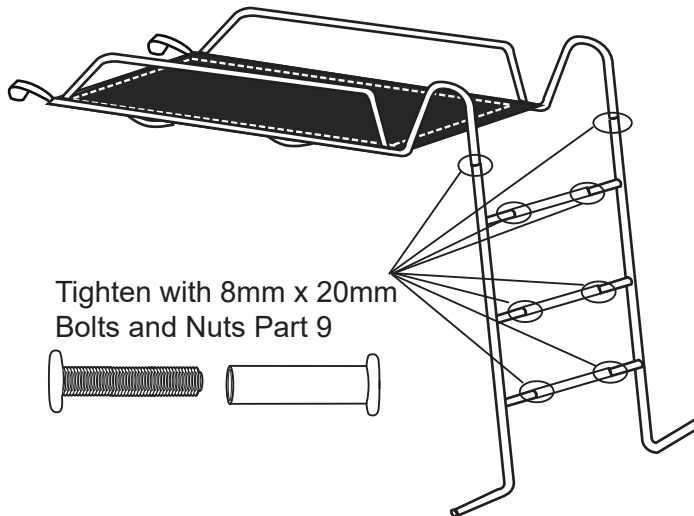


Using 2 allen keys to
tighten the bolt and nut.

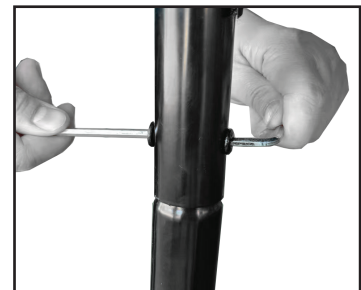



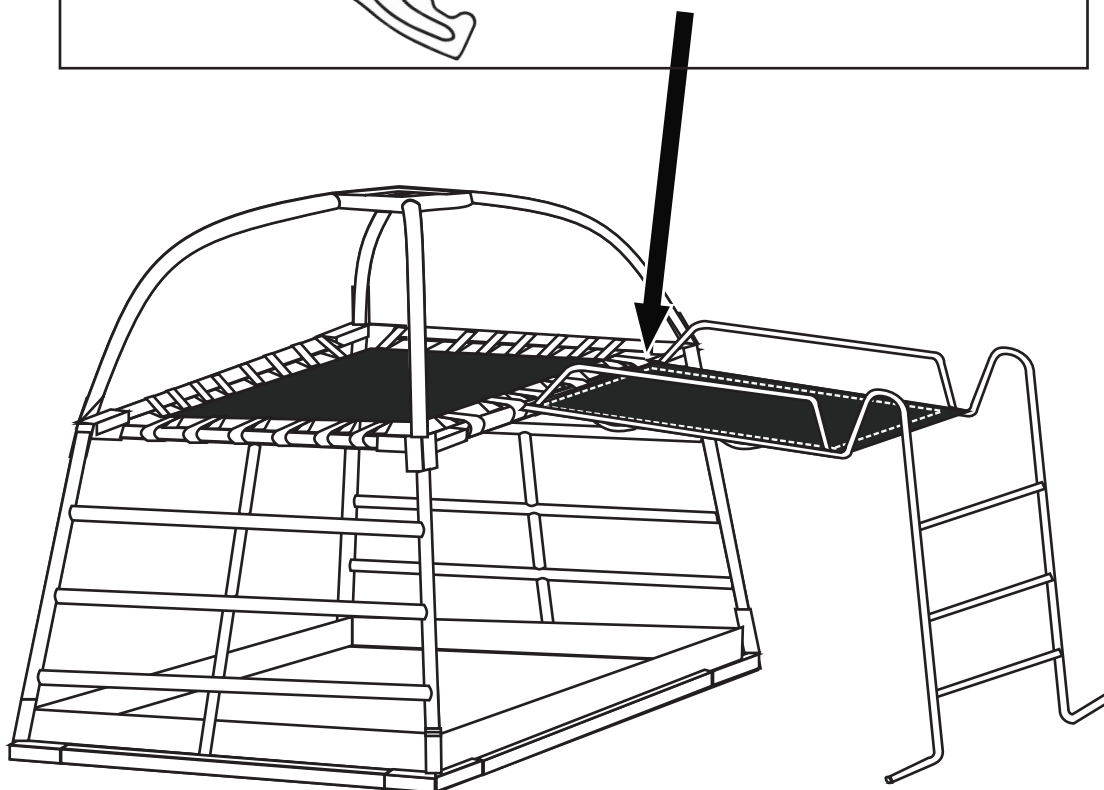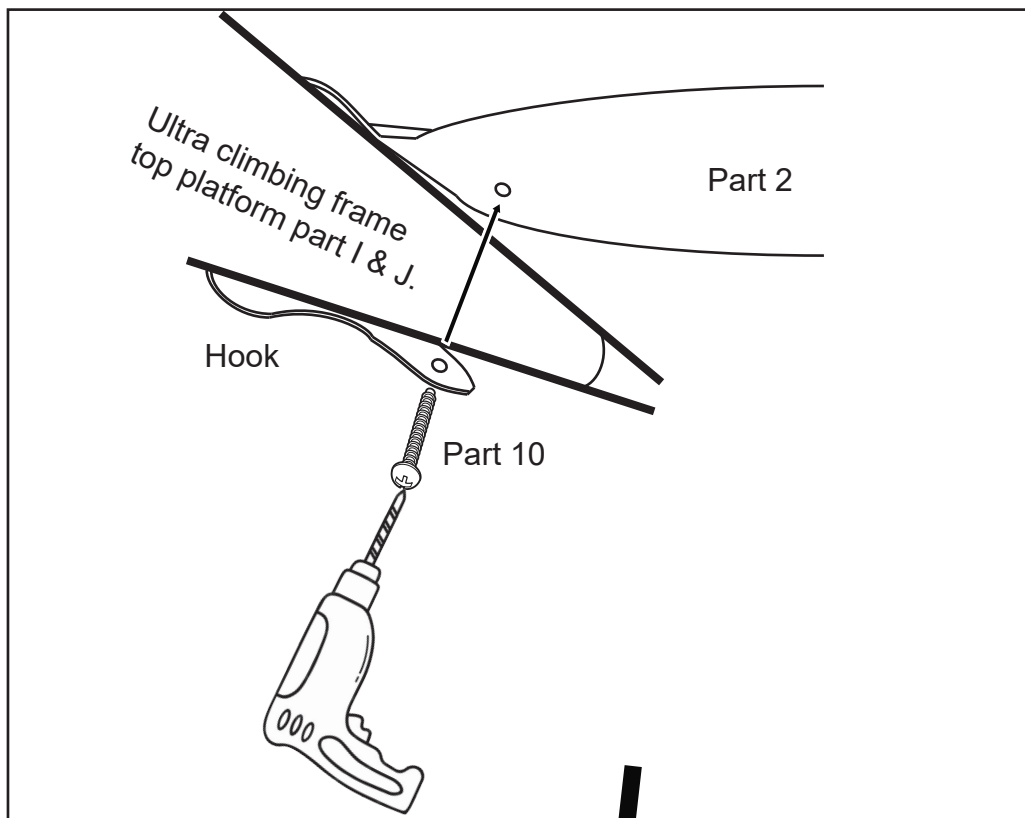



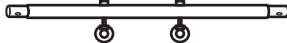
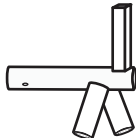


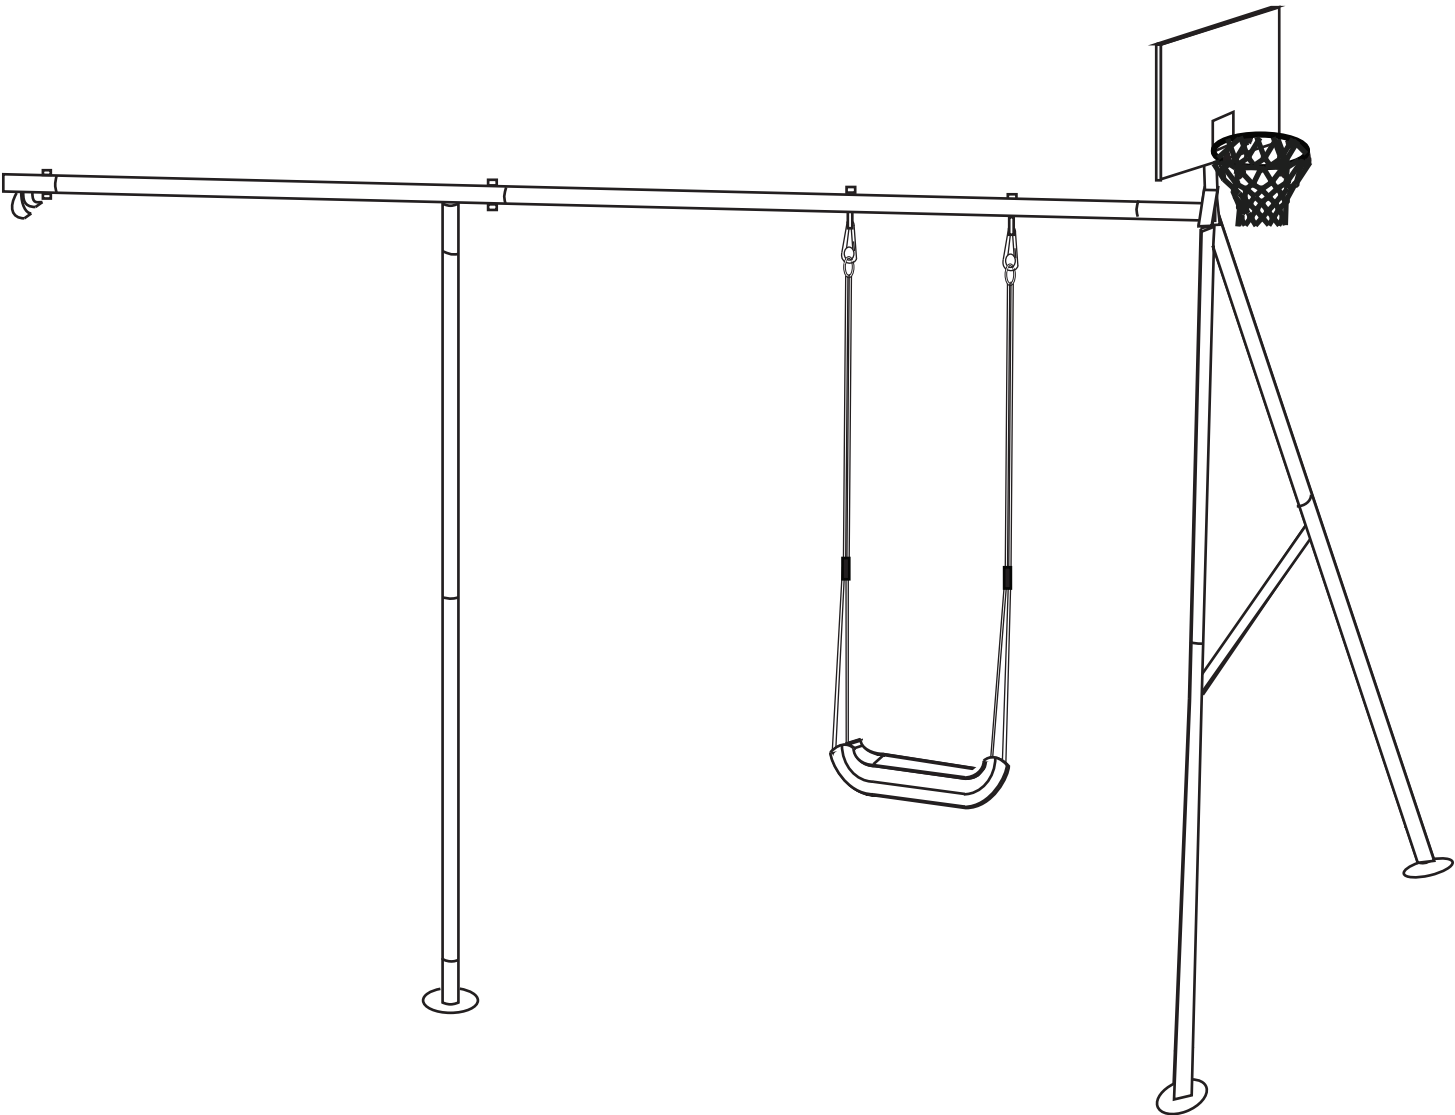






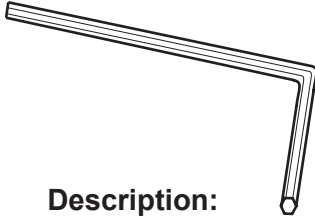

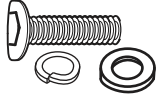
12. Use the hook on Part 2 and 3 attach onto Ultra Climbing Frame. Please using the electric drill to tighten with Self tapping screw Part 10. Now you have completed Bridge.





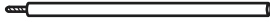

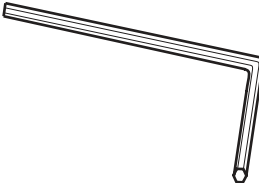


PART 3 - ASSEMBLE THE 3 IN 1

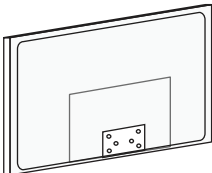

PARTS LIST
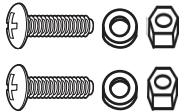
| | | | |
|---|---|--|--|
| <p>Part 1</p>  <p>Description: Tubing marking A Quantity: 2 pcs</p> | <p>Part 2</p>  <p>Description: Tubing marking B Quantity: 2 pcs</p> | <p>Part 3</p>  <p>Description: Tubing marking C Quantity: 1 pc</p> | <p>Part 4</p>  <p>Description: Tubing marking D Quantity: 1 pc</p> |
| <p>Part 5</p>  <p>Description: Tubing Quantity: 1 pc</p> | <p>Part 6</p>  <p>Description: Top horizontal tubing Quantity: 1 pc</p> | <p>Part 7</p>  <p>Description: Top horizontal tubing with O Ring Quantity: 1 pc</p> | <p>Part 8</p>  <p>Description: Connector Quantity: 1 pc</p> |
| <p>Part 9</p>  <p>Description: Clamp Quantity: 1 pc</p> | <p>Part 10</p>  <p>Description: Foot Pad Quantity: 2 pcs</p> | <p>Part 11</p>  <p>Description: Small Foot Pad Quantity: 1 pc</p> | <p>Part 12</p>  <p>Description: Swing with ropes and carabiners Quantity: 1 set</p> |
| <p>Part 13</p>  <p>Description: Basketball Board Quantity: 1 pc</p> | <p>Part 14</p>  <p>Description: Breakaway Rim Quantity: 1 pc</p> | <p>Part 15</p>  <p>Description: Basketball Netting Quantity: 1 pc</p> | <p>Part 16</p>  <p>Description: 6mm x 25mm Bolt and Nut set for Basketball Board Quantity: 2 pcs</p> |
| <p>Part 17</p>  <p>Description: Inflatable ball Quantity: 1 pc</p> | <p>Part 18</p>  <p>Description: 5mm Allen Key Quantity: 1 pc</p> | <p>Part 19</p>  <p>Description: 6mm Allen Key Quantity: 1 pc</p> | <p>Part 20</p>  <p>Description: 8mm x 15mm Bolt and Washer (C marking) Quantity: 1 set</p> |
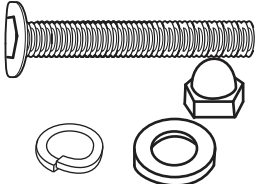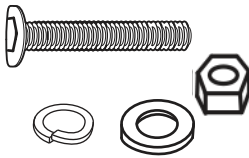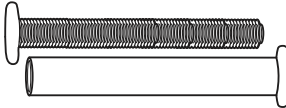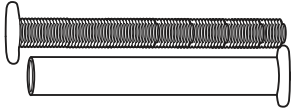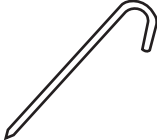
| | | | |
|--|---|--|---|
| <p style="text-align: center;">Part 21</p>  <p>Description: 10mm x 50mm Bolt, Nut and Washer (D marking) Quantity: 3 sets</p> | <p style="text-align: center;">Part 22</p>  <p>Description: 8mm x 30mm Bolt, Nut and Washer (E marking) Quantity: 2 sets</p> | <p style="text-align: center;">Part 23</p>  <p>Description: Bolts and Nuts 8mm x 30mm (B marking) Quantity: 2 sets</p> | <p style="text-align: center;">Part 24</p>  <p>Description: Bolts and Nuts 8mm x 35mm (A marking) Quantity: 8 sets</p> |
| <p style="text-align: center;">Part 25</p>  <p>Description: Metal pegs Quantity: 6 pcs</p> | <p style="text-align: center;">Part 26</p>  <p>Description: Expandable bolt Quantity: 3 pcs</p> | <p style="text-align: center;">Part 27</p>  <p>Description: 4mm Allen Key Quantity: 2 pcs</p> | |

 
 
ASSEMBLY INSTRUCTIONS

- Place the equipment on level ground and not less than 72in (1.8m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- Do not install the equipment over concrete, asphalt, packed earth or any other hard surface; a fall onto a hard surface can result in serious injury or death to the equipment user.



TIGHTENING NUTS & BOLTS

- For ease of installation, do not over-tighten the nuts initially when you are starting to assemble the equipment. This will allow for adjustments during installation.
 - After you have finished assembling the main components, go back and fully tighten all nuts.
- Check the entire unit and make sure all parts are properly assembled before allowing children to use the equipment.


Assembly The 3 in 1




 10mm x 50mm Bolt, Nut and Washer (D marking) Part 21

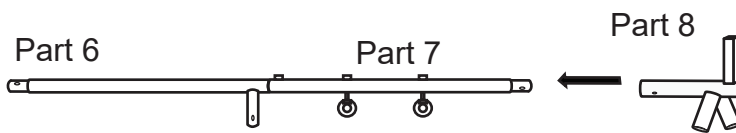


10mm x 50mm Bolt, Nut and Washer (D marking) Part 21

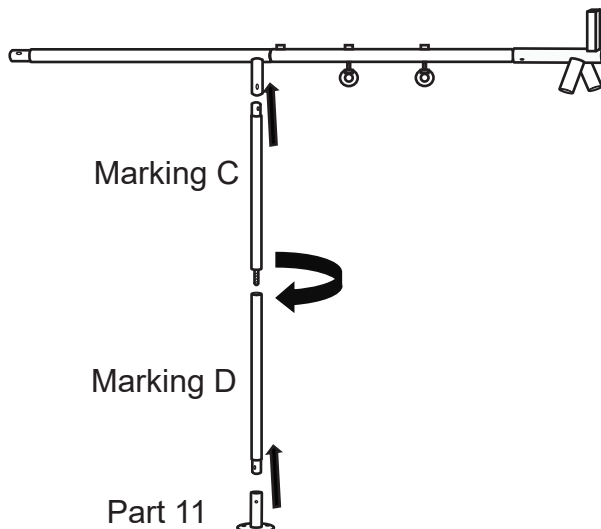


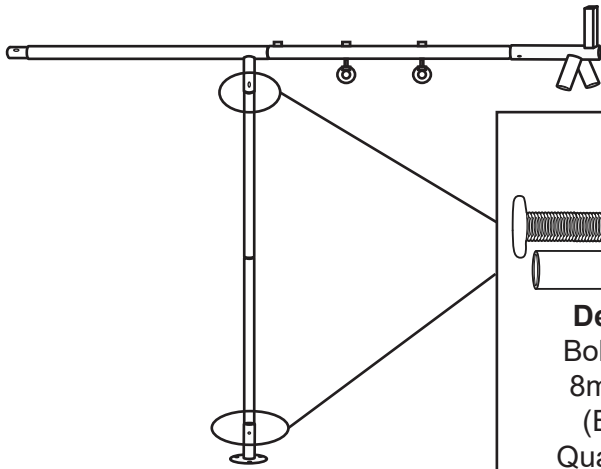


Part 23

 

Description:
Bolts and Nuts
8mm x 30mm
(B marking)
Quantity: 2 sets

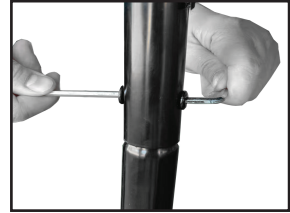


Using 2 allen keys to tighten the bolt and nut.

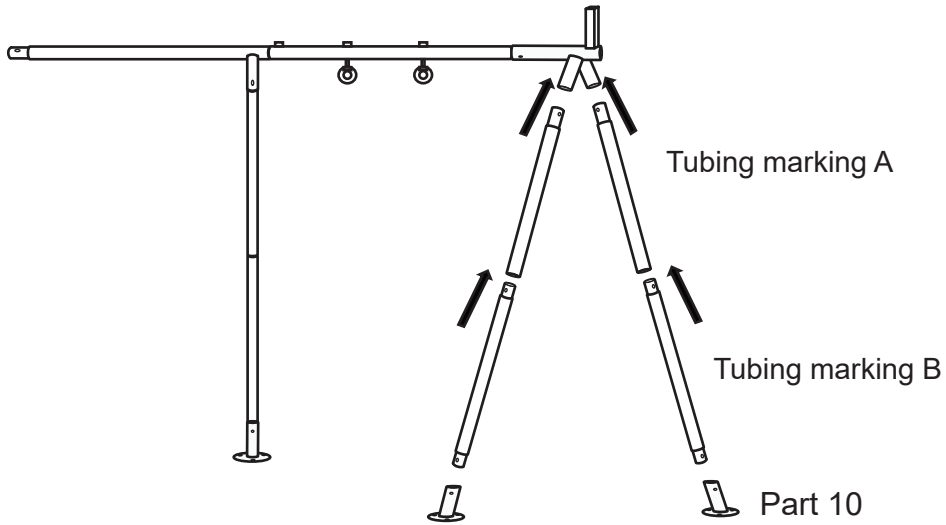


Tubing marking A

Tubing marking B



Part 10


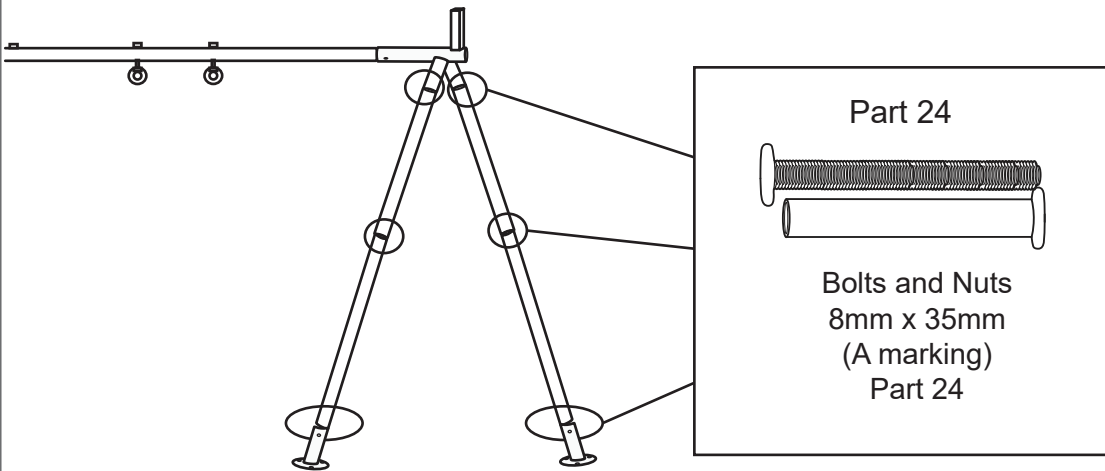


Part 24

 

Bolts and Nuts
8mm x 35mm
(A marking)
Part 24

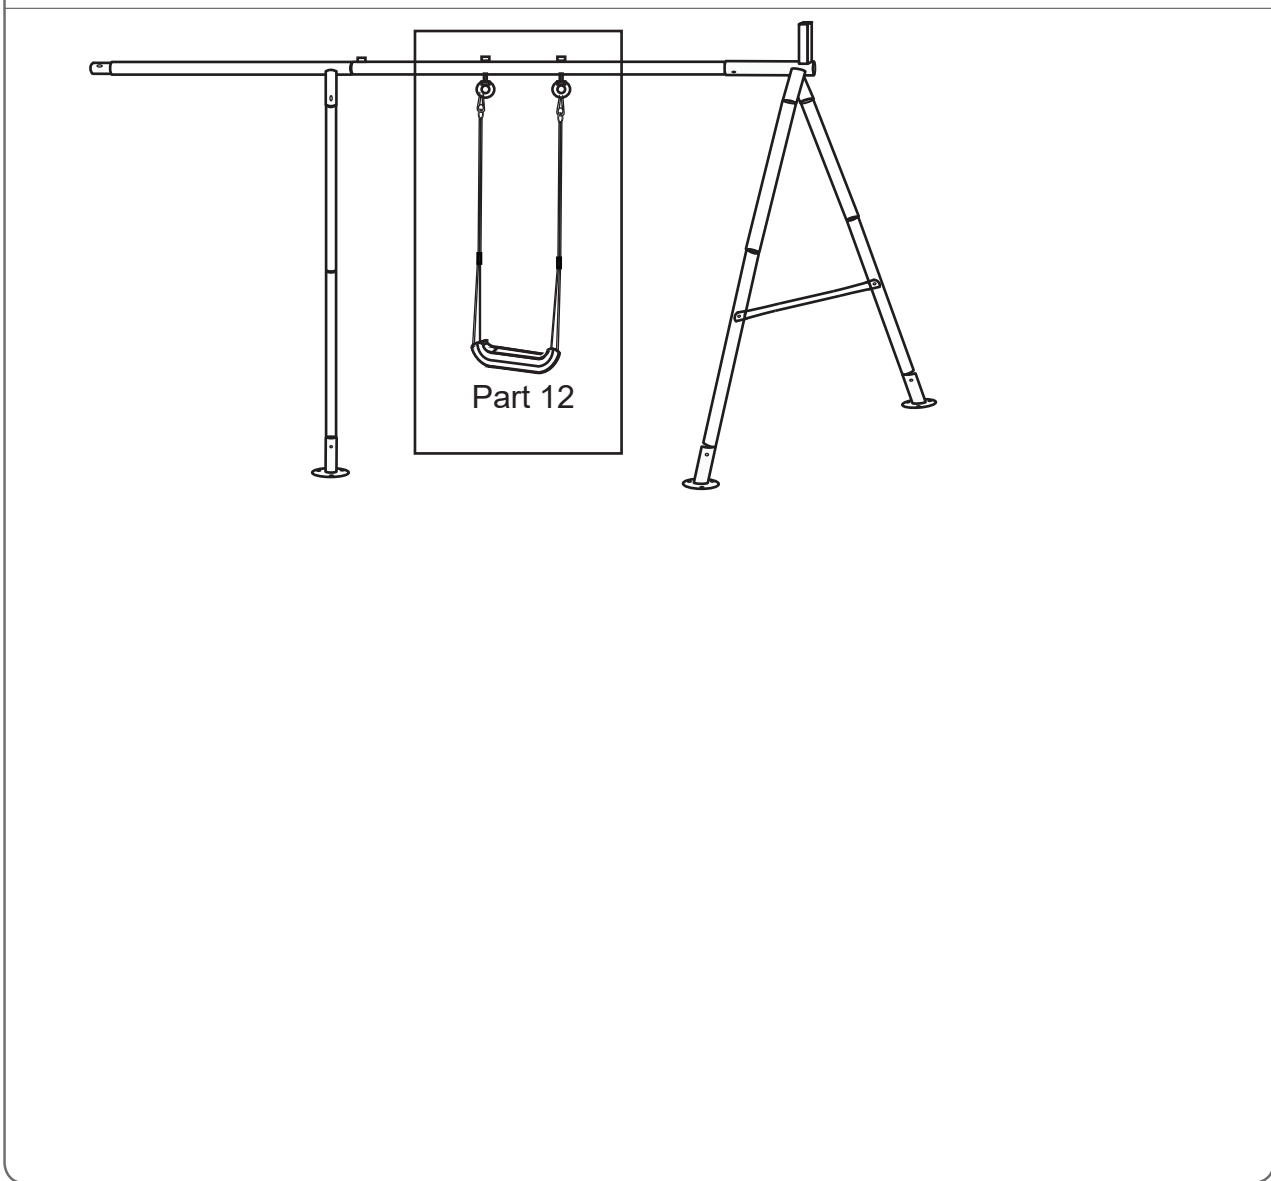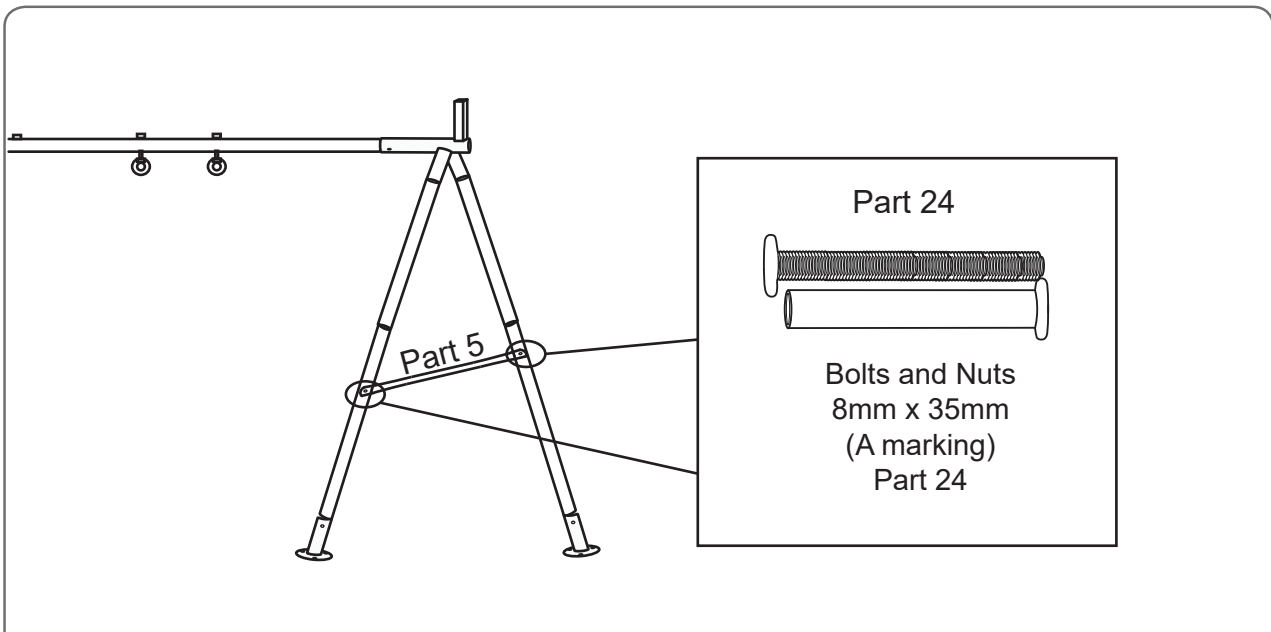

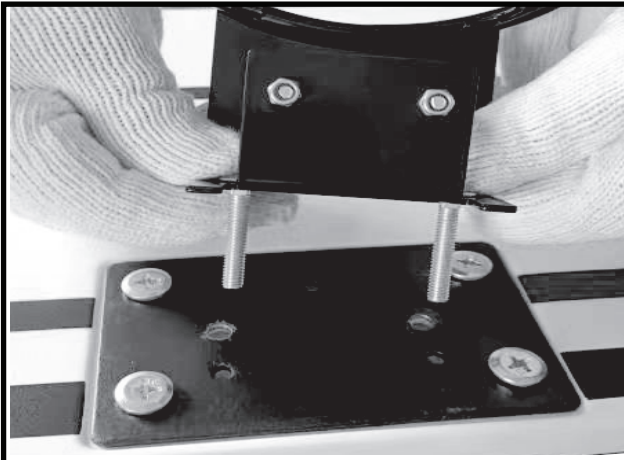
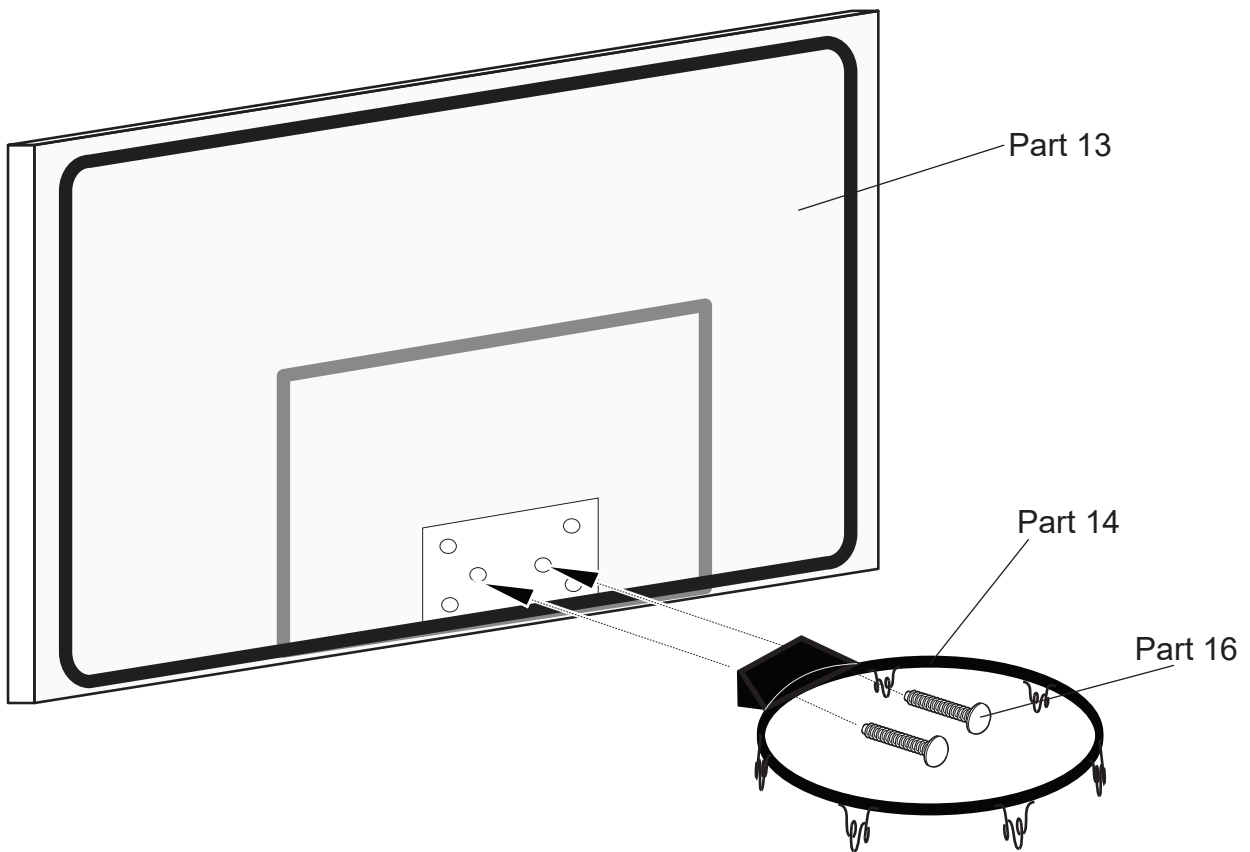




1) Insert the screws Part 16 into holes of Breakaway Rim Part 14.


2) Then insert the screws through the basketball board Part 13.



3) Using wrench to tighten the nuts on back of board.(Wrench not provided)

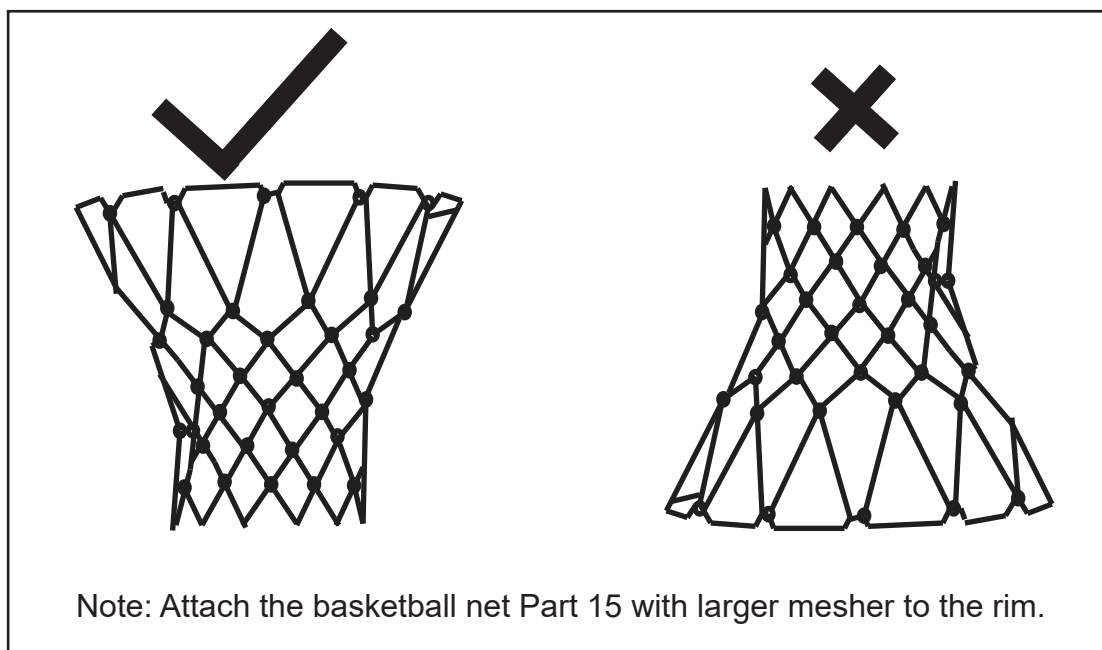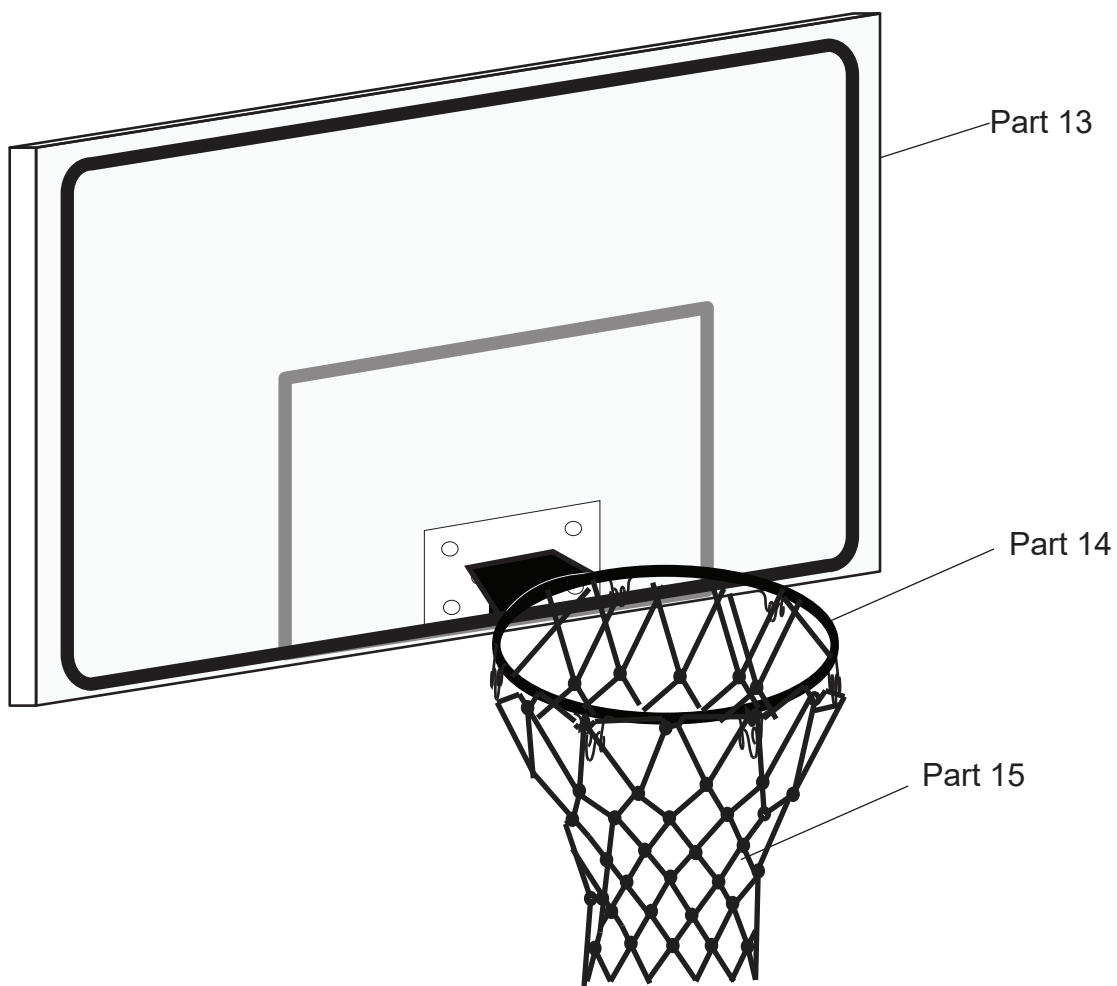

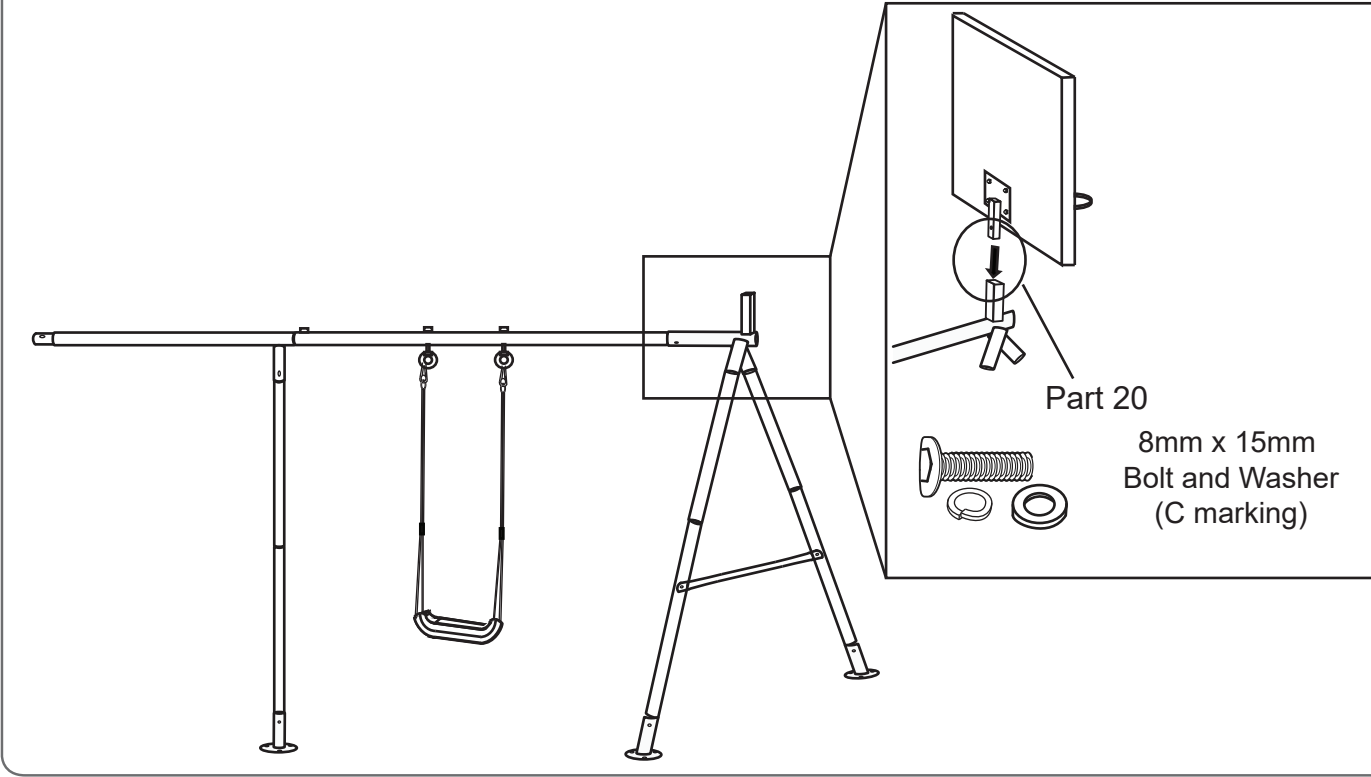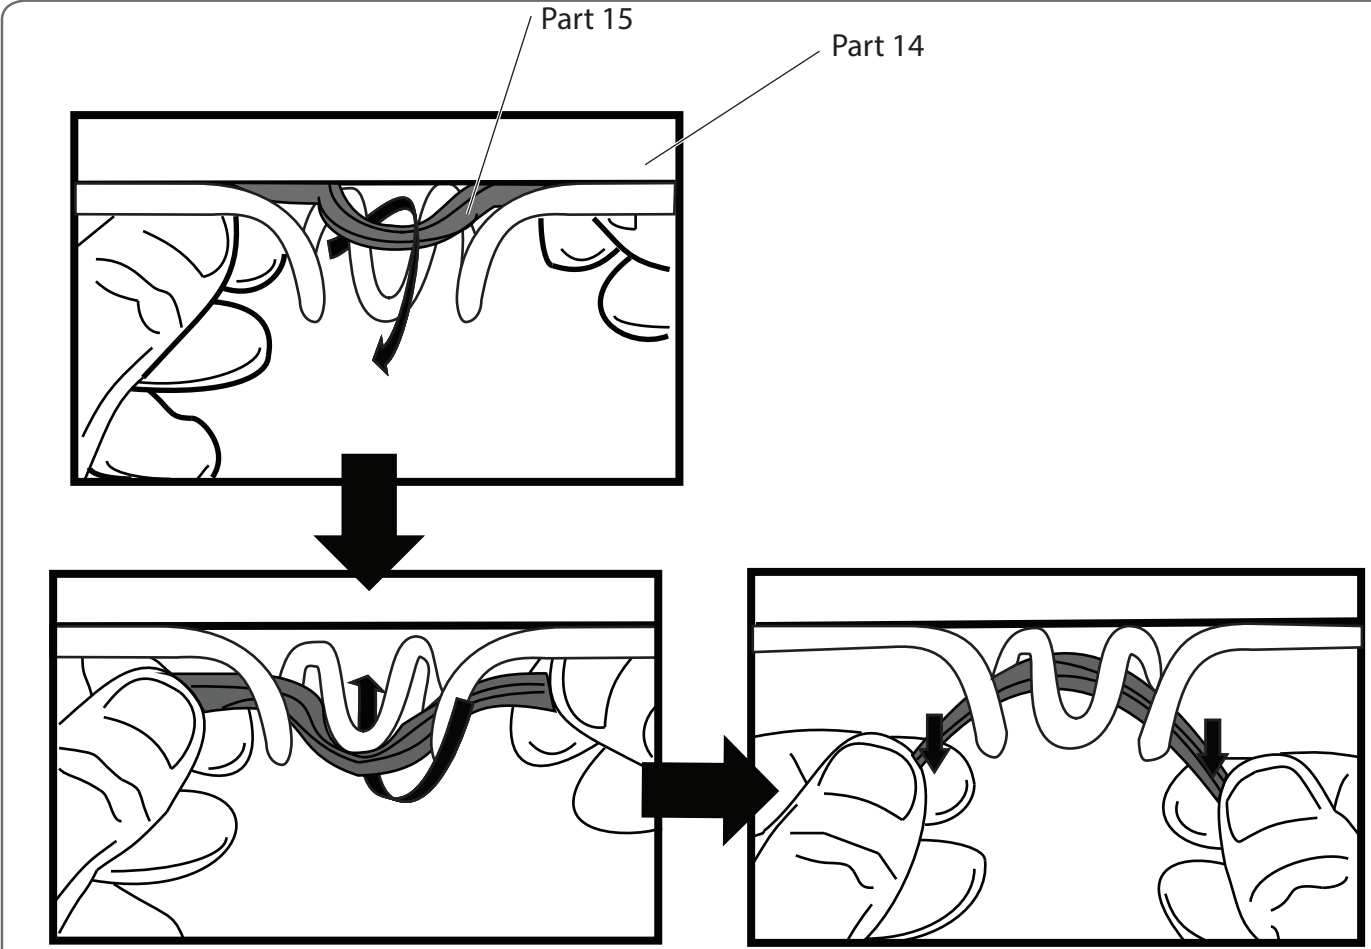

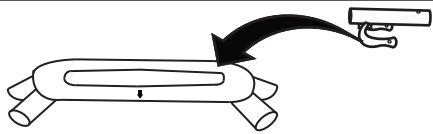


Insert the Clamp hook into the top of Tent cover on Climbing Ultra frame




Inside of Tent cover



Ultra Climbing Frame Part 1

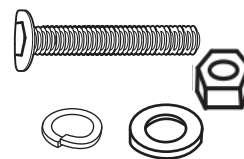

Tighten with 2 pcs of 8mm x 30mm Bolt, Nut and Washer (E marking) Part 22

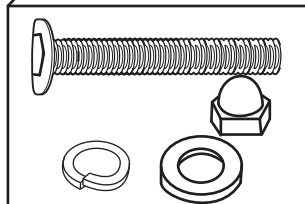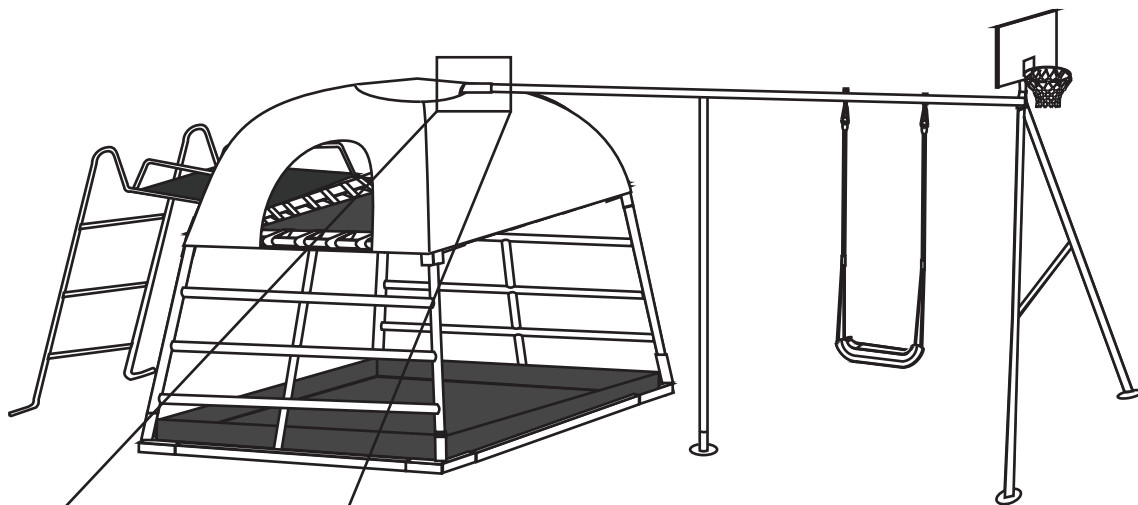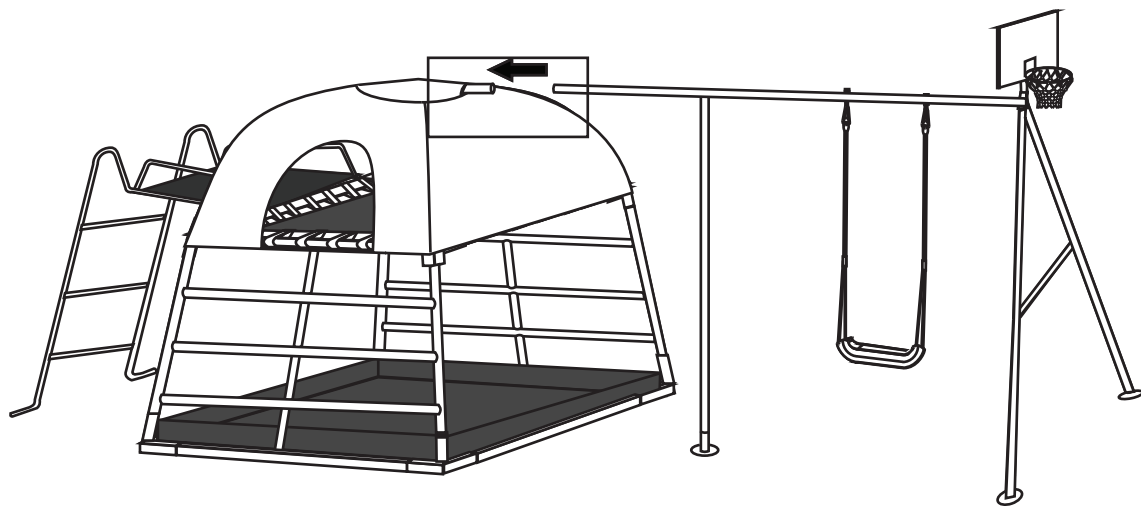

10mm x 50mm
Bolt, Nut and Washer
(D marking)
Part 21

Now you have completed the 3 in 1.

ANCHORING

The following anchoring options may be considered:


Spiral Peg

- If your soil is hard (clay, etc.), the spiral peg may be suitable.
 - Be sure that the equipment is located on level ground.
 - Twist the spiral peg into the ground until only the end with the hook is above the ground and next to the leg. Insert the hook into the bottom opening of the leg.
- Ensure that the hook is secured onto the leg opening.



Hex Nut Screw (For permanent installation)

- Grounds with sandy soil (soft) condition, it must be anchored with concrete footing (concrete not included)
 - Be sure that the equipment is assembled and placed on level ground
 - Dig holes around leg tube, as shown in drawing in the next page. As you dig deeper, enlarge the diameter of the hole to fix the cement
 - Place 2 inches of brick or gravel underneath the leg, as shown in drawing in the next page
 - Use about 45 lbs. of concrete per leg
 - Cover the concrete with dirt and protective surface material
- Allow 6-7 days for the concrete to dry properly

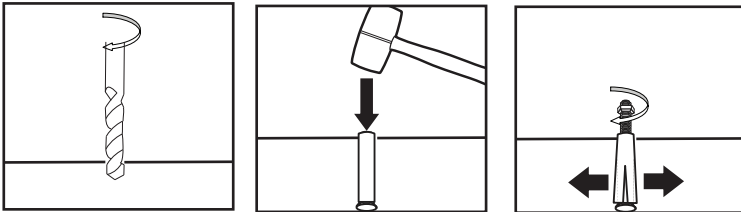

Note: The maximum fall height for this product is 7 feet. The minimum ground clearance between the bottom of the suspended plays and the playing or ground surface must be 8 inches.

WARNING

Please properly anchor the equipment to minimize the risk of injury or death.

If the swing set is used without proper anchoring, it could be dangerous and may cause injury.