

ATTACH THE ENCLOSURE NET TO THE ENCLOSURE FRAME



1. Climb onto the trampoline and stand in the center of the enclosure net. Find an open section along the top of the net where the top circular frame is exposed from the strap holding the frame. (see Diagram 1). Place your hands on the outside of this area and reach up and snap the exposed area of the circular frame into place on the plastic cap on top of frame pole #1.

Repeat this step for frame pole #2, then #3, and finally #4. **Please note:** if you have a 15ft JUMPPOD you may have a 5th pole to connect to.





2. Now attach the net to the bed (jumping surface) using the enclosure ropes. (NEXT PAGE)



Make sure to securely fix the poles into place inside the plastic caps.

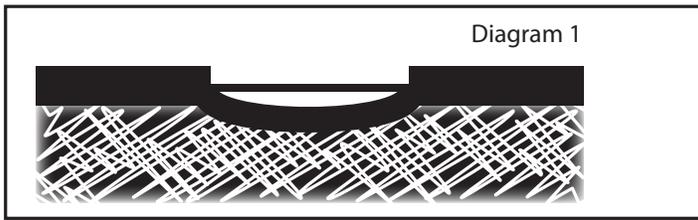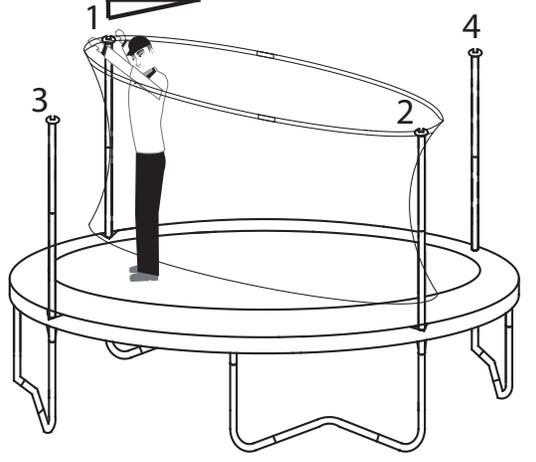

ATTACH ENCLOSURE NET TO TRAMPOLINE BED

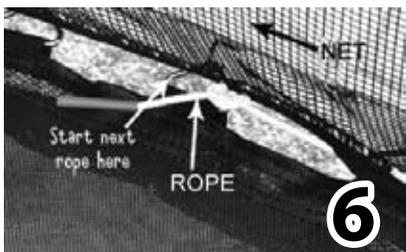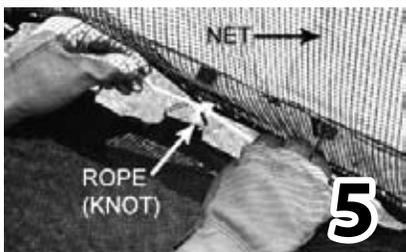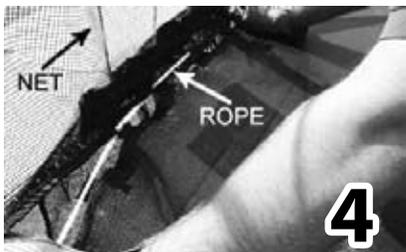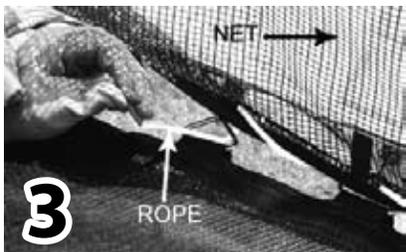


Note: During this Step, you will "sew" the lower edge of the Netting to the V-rings on the bed using the ROPE. Begin by dividing the set of ropes into two groups of 4 each.

PART A: Take the 1st group of 4 ropes and locate the V-Ring closest to the door. Tie the end of the rope opposite of the plastic cap to this V-Ring (Diagram 1).

PART B: While moving in a clockwise direction around the trampoline: Thread the ROPE through the lower edge of the Netting halfway between the first V-ring and the V-ring to the left, (Diagram 2) and then thread the ROPE through the next V-ring to the left (Diagram 3). Repeat this procedure until the entire ROPE is threaded through the Netting and the V-Rings. Remember to pull the rope tight while continuing to thread (Diagram 4). Finally, tie the end of the ROPE to the last V-Ring it reaches. (Diagram 5).

PART C: Tie a second ROPE to the last V-Ring reached by the first ROPE. (Diagram 6). Thread the second ROPE through the Netting and V-ring by repeating the procedure described in PART B. Repeat this procedure with the remaining 3 ROPES until reaching the point directly across from the starting location. (See Diagram 7).

Now return to the starting location and repeat this process in a counter-clockwise direction with the second set of 4 ROPES. Continue threading the ROPE around the bed until reaching the ending location of the first set of ROPES. Make sure that the Netting is sewn to every V-ring on the trampoline bed including every V-ring below the door of the trampoline.

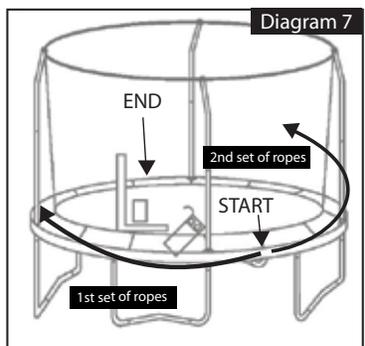

INSERT THE ENCLOSURE FRAME INTO THE TRAMPOLINE

Return to the trampoline

PART A: Take one completed straight enclosure piece and insert it into the hole of the closest Large T-Socket as laid out in STEP TWO. Make sure that the straight tube is oriented so the small holes are in the position shown.

PART B: Tighten a self tapping screw into the small hole in the Large T-Socket

Repeat steps A and B to attach the other three straight poles in their corresponding locations.

Please NOTE: If you have a 15ft JUMPPOD you may have a 5th pole to assemble.

